



QUAL2E Windows Interface User's Guide

QUAL2E Windows Interface User's Guide

**United States Environmental Protection Agency
Office of Water
Office of Science and Technology
Standards and Applied Science Division
401 M Street, SW
Washington, DC 20460**

FOREWORD

Water quality standards are implemented through a process of calculating Waste Load Allocations (WLAs) and/or Total Maximum Daily Loads (TMDLs). Ultimately Permit Limits are developed based on the calculated WLAs and TMDLs. Many of these required calculations are performed with computer simulation models. Either steady-state or dynamic modeling techniques may be used.

The Office of Science and Technology develops and maintains analytical tools to assist in performing analysis of water quality problems. The Windows interface developed for the QUAL2E model will help users prepare input files more efficiently. Default values for constants are included in the interface to provide reasonable numbers with which to begin the modeling. Integrated data manipulation options, stream network graphics, and plotting capabilities are among the many useful features included in the QUAL2E Windows interface. Different screens or parts of screens will be active or inactive depending on the input. This feature reduces the potential for making mistakes during data entry.

This document is an Agency software user's manual. It does not establish or affect legal rights or obligations. It does not establish binding requirements. This document is expected to be revised periodically to reflect changes in this rapidly evolving area. Comments from users will be welcomed. Send comments to U.S. EPA, Office of Water, Office of Science and Technology, Standards and Applied Science Division (4305), 401 M Street SW, Washington, DC 20460.

Tudor T. Davies
Director
Office of Science and Technology

ACKNOWLEDGMENTS

The QUAL2E Windows Interface software and this user's manual were written by Mohammed Lahlou, Ph.D., and Sayedul H. Choudhury of Tetra Tech, Inc. and Yin Wu, Ph.D., and Kirk Baldwin of General Science Corporation, under the direction of D. King Boynton of EPA's Office of Science and Technology. The authors would like to thank Gerald LaVeck, and Russell Kinerson of the Office of Science and Technology for their contribution and assistance in the successful completion of this project.

DISCLAIMER

The information contained in this user's manual is intended to assist in using the Windows™ interface for the QUAL2E model, developed by the U.S. Environmental Protection Agency's Office of Science and Technology. This user's manual is not a substitute for *The Enhanced Stream Water Quality Models QUAL2E and QUAL2E-UNCAS: Documentation and User Manual* developed by Thomas O. Barnwell, Jr. and Linfield C. Brown (EPA/600/3-87/007) which addresses the model theory, and provides more specific guidance on applications.

TRADEMARKS

Microsoft is a registered trademark, and Windows is a trademark of Microsoft Corporation.

CONTENTS

<u>Section</u>	<u>Page</u>
FOREWORD	i
ACKNOWLEDGEMENTS, DISCLAIMER, TRADEMARKS	ii
1. INTRODUCTION	1
2. TECHNICAL SUMMARY AND BACKGROUND	3
2.1 Overview of QUAL2E	3
2.2 Prototype Presentation	3
2.3 Uncertainty Analysis	4
2.4 Data Requirements	4
2.5 Output File	6
2.6 Model Limitations	6
3. TECHNICAL DESCRIPTION OF THE QUAL2E IMPLEMENTATION IN WINDOWS	7
4. MINIMUM SYSTEM REQUIREMENTS AND SOFTWARE INSTALLATION	11.....
4.1 Minimum System Requirements	11
4.2 Installing the Software	11
5. USING THE QUAL2E WINDOWS INTERFACE	13
5.1 Accessing an Existing File or Opening a New File	13
5.2 File Naming Conventions	13
5.3 Saving Input Files	14
5.4 Setting Up a Default Editor for Viewing Output Files	14
5.5 Submitting an Input File to the Model	16
5.6 QUAL2E Windows Interface Commands and Function Keys	16
5.7 Import File Option in QUAL2E	17
5.8 How to Use the Graphics Routine	17
5.9 Array Screen Capabilities in QUAL2E	18
5.10 Unit Conversion	19
6. EXAMPLE RUNS	21
6.1 Example 1 - Dirty River Reaches DO/BOD/TEMP Simulation	21
6.2 Example 2 - Withlacoochee River QUAL2E and Uncertainty Analysis	32
6.3 Example 3 - Dynamic/Diurnal Simulation	32

CONTENTS (continued)

APPENDIX A: QUAL2E WINDOWS INTERFACE DESIGN	35
REFERENCE	53

TABLES

<u>Number</u>	<u>Page</u>
3.1 Input Screen Sequence in QUAL2E Windows Interface	8
3.2 Element Types Used in QUAL2E	9
6.1 Example Run Matrix for QUAL2E Windows Interface	22
6.2 Example Input files with QUAL2E Windows and QUAL2E	23

FIGURES

2.1 QUAL2E Constituent Interactions	5
5.1 Different Files and Their Usage in a QUAL2E Model Run	15
6.1 Sketched Stream System for a Study Area	23
6.2 Computational Elements in Example 1	24
6.3 Entering Data in QUAL2E Windows Interface Screens	25
6.4 QUAL2E Graph from Example 1	33
6.5 Phosphorus Concentration vs. Distance	33

1.INTRODUCTION

The Enhanced Stream Water Quality Model (QUAL2E) is a comprehensive and versatile stream water quality model. It can simulate up to 15 water quality constituents in any combination desired by the user (Brown and Barnwell, 1987). The model is applicable to dendritic streams that are well mixed. It uses a finite-difference solution of the advective-dispersive mass transport and reaction equations. The model is intended for use as a water quality planning tool.

QUAL2E-UNCAS is an enhancement to QUAL2E that allows the user to perform uncertainty analysis. Three uncertainty options are employed in QUAL2E-UNCAS: sensitivity analysis, first order error analysis, and Monte Carlo simulation.

The QUAL2E Windows™ interface was developed to assist the user in data input and model execution and to make a complex model user-friendly. The Windows interface was developed for the U.S. Environmental Protection Agency's Office of Science and Technology, Standards and Applied Science Division, to help the Division implement the Total Maximum Daily Load (TMDL) program. This user's guide provides instructions on the use of the QUAL2E interface and illustrates its use with three example runs. The Windows interface integrates the QUAL2E model and data handling needs to make the model implementation user-friendly. A brief description of the QUAL2E model structure is presented to facilitate subsequent discussions.

This guide is divided into six sections. Section 2 provides a technical summary of the QUAL2E model, as well as the model structure, the input re-

quirements, and the output. Section 3 describes the Windows implementation of the QUAL2E model, including descriptions of the screen sequences, changes made for ease of use, and limitations of the implementation. Section 4 provides minimum requirements and instructions for installing the software. Section 5 provides the information necessary to use the QUAL2E interface, including:

- ! Accessing an Existing File or Opening a New File
- ! File-Naming Conventions
- ! Saving Input Files
- ! Setting Up a Default Editor for Viewing Output Files
- ! Submitting an Input File to the Model
- ! QUAL2E Windows Interface Commands and Function Keys
- ! Import File Option in QUAL2E
- ! How to Use the Graphics Routine
- ! Array Screen Capabilities in QUAL2E
- ! Unit Conversion

Section 6 contains three example runs that highlight user entry and model output. Appendix A provides the screen structure and descriptions of the variables for the Windows interface.

2. TECHNICAL SUMMARY AND BACKGROUND

2.1 Overview of QUAL2E

QUAL-I was initially developed by the Texas Water Development Board in the 1960s. Several improved versions of the model were developed by EPA as part of this effort, and after extensive review and testing the QUAL-II series became widely used. Present support for the model is provided by the Environmental Protection Agency's Center for Exposure Assessment Modeling (CEAM).

QUAL2E simulates up to 15 water quality constituents in branching stream systems. The model uses a finite-difference solution of the advective-dispersive mass transport and reaction equations. A stream reach is divided into a number of computational elements, and for each computational element, a hydrologic balance in terms of stream flow (e.g., m^3/s), a heat balance in terms of temperature (e.g., $^{\circ}\text{C}$), and a material balance in terms of concentration (e.g., mg/l) are written. Both advective and dispersive transport processes are considered in the material balance. Mass is gained or lost from the computational element by transport processes, wastewater discharges, and withdrawals. Mass can also be gained or lost by internal processes such as release of mass from benthic sources or biological transformations.

The program simulates changes in flow conditions along the stream by computing a series of steady-state water surface profiles. The calculated stream-flow rate, velocity, cross-sectional area, and water depth serve as a basis for determining the heat and mass fluxes into and out of each computational element due to flow. Mass balance determines the concentrations of conservative minerals, coliform bacteria, and nonconservative constituents at each computational element. In addition to material fluxes, major processes included in mass balance are transformation of nutrients, algal production, benthic and carbonaceous demand, atmospheric reaeration, and the effect of these processes on the dissolved oxygen balance. QUAL2E uses chlorophyll *a* as the indicator of planktonic algae biomass. The nitrogen cycle is divided into four compartments: organic nitrogen, ammonia nitrogen, nitrite nitrogen, and nitrate nitrogen. In a similar manner, the phosphorus

cycle is modeled by using two compartments. The primary internal sink of dissolved oxygen in the model is biochemical oxygen demand (BOD). The major sources of dissolved oxygen are algal photosynthesis and atmospheric reaeration.

The model is applicable to dendritic streams that are well mixed. It assumes that the major transport mechanisms, advection and dispersion, are significant only along the main direction of flow (the longitudinal axis of the stream or canal). It allows for multiple waste discharges, withdrawals, tributary flows, and incremental inflow and outflow. It also has the capability to compute required dilution flows for flow augmentation to meet any pre-specified dissolved oxygen level.

Hydraulically, QUAL2E is limited to the simulation of time periods during which both the stream flow in river basins and input waste loads are essentially constant. QUAL2E can operate as either a steady-state or a quasi-dynamic model, making it a very helpful water quality planning tool. When operated as a steady-state model, it can be used to study the impact of waste loads (magnitude, quality, and location) on instream water quality. By operating the model dynamically, the user can study the effects of diurnal variations in meteorological data on water quality (primarily dissolved oxygen and temperature) and also can study diurnal dissolved oxygen variations due to algal growth and respiration. However, the effects of dynamic forcing functions, such as headwater flows or point loads, cannot be modeled in QUAL2E.

2.2 Prototype Presentation

Prototype representation in QUAL2E consists of dividing a stream into a network consisting of "Headwater," "Reaches," and "Junctions." The fundamental reason for subdividing sections of a stream into "reaches" is that QUAL2E assumes that some 26 physical, chemical, and biological parameters (model input parameters or coefficients) are constant along a "reach." For example, different values for Manning's roughness coefficient, sediment oxygen demand, and algal settling rate can be

specified by the user for different reaches, but each of these values remains constant over a particular reach. However, the state variables change within a reach; e.g., DO is calculated at each computational element and thus can vary within a reach. The question that must be addressed in order to define a "reach" is what constitutes "significant" change in these model inputs—"significant" in the sense of their impact on simulation results, not necessarily in the sense of change in the inputs themselves.

Mass transport in the QUAL2E computer program is handled in a relatively simple manner. There seems to be some confusion about QUAL2E's transport capabilities because it is sometimes called a "quasi-dynamic" model. However, in all of the computer programs in the QUAL series, there is an explicit assumption of steady flow; the only time-varying forcing functions are the climatologic variables that primarily affect temperature and algal growth. A more appropriate term for this capability is "diel," indicating variation over a 24-hour period. The forcing function used for estimating transport is the stream flow rate, which, as mentioned above, is assumed to be constant. Stream velocity, cross-sectional area, and depth are computed from stream flow.

One of the most important considerations in determining the assimilative capacity of a stream is its ability to maintain an adequate dissolved oxygen concentration. The QUAL2E program performs dissolved oxygen balance by including major source and sink terms in the mass balance equation. As shown in Figure 2.1, the nitrogen cycle is composed of four compartments: organic nitrogen, ammonia nitrogen, nitrite nitrogen, and nitrate nitrogen. The phosphorus cycle is similar to, but simpler than, the nitrogen cycle, having only two compartments. Ultimate carbonaceous biochemical oxygen demand (CBOD) is modeled as a first-order degradation process in QUAL2E. If the modeler uses BOD5 as an input, QUAL2E converts 5-day BOD to ultimate BOD for internal calculations. Oxidation processes involved in CBOD decay and in the nutrient cycles represent the primary internal sinks of dissolved oxygen in the QUAL2E program. The major source of dissolved oxygen, in addition to that supplied from algal photosynthesis, is atmospheric reaeration.

2.3 Uncertainty Analysis

Uncertainty analysis for model simulations is assuming a growing importance in the field of water quality management. QUAL2E allows the modeler to perform uncertainty analysis on steady-state water

quality simulations. Three uncertainty analysis techniques are employed in QUAL2E-UNCAS: sensitivity analysis, first-order error analysis, and Monte Carlo simulation. With this capability, the user can assess the effect of model sensitivities and of uncertain input data on model forecasts. Quantifications of the uncertainty in model forecasts will allow assessment of the risk (probability) of a water quality variable being above or below an acceptable level. The user can select the important input variables to be perturbed and locations on the stream where the uncertainty analysis is to be applied.

2.4 Data Requirements

QUAL2E requires some degree of modeling sophistication and expertise on the part of a user. The user must supply more than 100 individual inputs, some of which require considerable judgment to estimate. The input data in QUAL2E can be grouped into three categories: a stream/river system, global variables, and forcing functions. Additionally, there are three data groups for simulation control and uncertainty analysis.

The first step in preparing the QUAL2E inputs is to describe a complete stream/river system by applying the rules that are defined by the model. The stream system should be divided into reaches, which are stretches of stream that have uniform hydraulic characteristics. Each reach is then subdivided into computational elements of equal length. Thus, all reaches must consist of an integer number of computational elements. Functionally each computational

Figure 2.1 QUAL2E Constituent Interactions

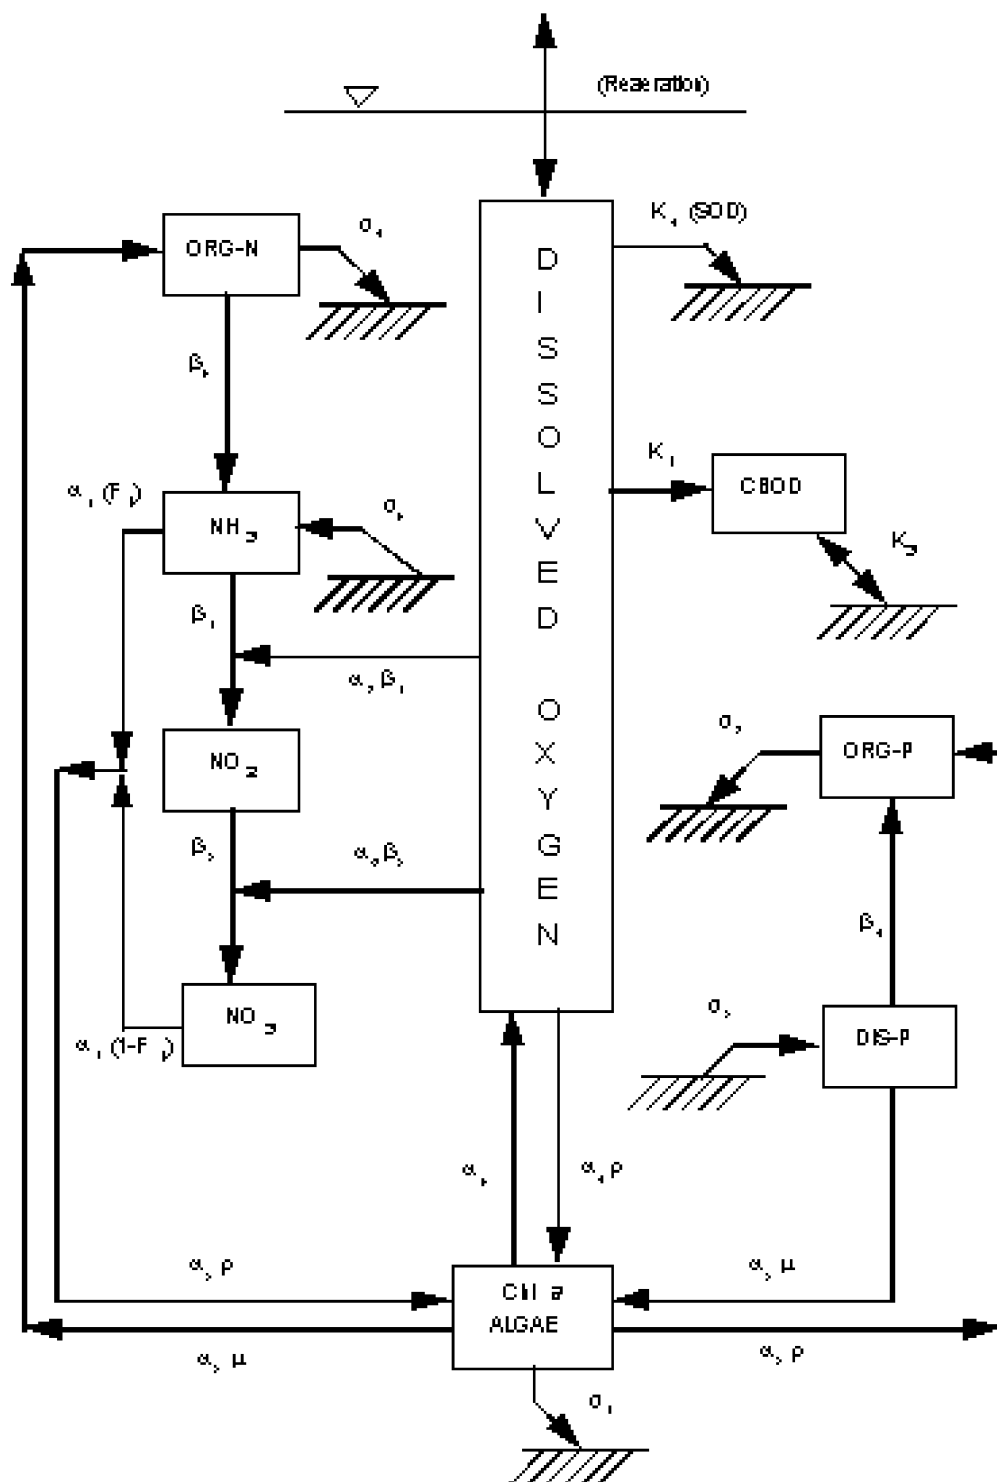


Figure 2.1 QUAL2E Constituent Interactions

The global variables include simulation variables, such as units and simulation type, water quality constituents, and some physical characteristics of the basin. Up to 15 water quality constituents can be modeled by QUAL2E.

Forcing functions are user-specified inputs that drive the system being modeled. These inputs are specified in terms of flow, water quality characteristics, and local climatology. QUAL2E accommodates four types of hydraulic and mass-load-forcing functions in addition to local climatological factors: headwater - inputs, point sources or withdrawals, incremental inflow/outflow along a reach, and the downstream boundary concentration (optional).

Local climatological data are required for the simulation of algae and temperature. The temperature simulation uses a heat balance across the air-water interface and thus requires values of wet and dry bulb air temperatures, atmospheric pressure, wind velocity, and cloud cover. The algal simulation requires values of net solar radiation. For dynamic simulations, these climatological data must be input at regular time intervals over the course of the simulation and are applied uniformly over the entire river basin. For modeling steady-state temperature and algae, average daily local climatological data are required and may vary spatially over the basin by reach.

The uncertainty analysis procedures incorporated into the computer program guide the user in the calibration process, in addition to providing information about the uncertainty associated with the calibrated model.

To create QUAL2E input files, the user has to follow data type sequences within one particular input file. There are five different input files for which certain combinations must be created before running the model.

2.5 Output File

QUAL2E produces three types of tables—hydraulics, reaction coefficient, and water quality—in the output file. The hydraulics summary table contains flows, velocities, travel time, depths, and cross-sectional areas along each reach. The reaction coefficient table lists the reaction coefficients for simulated constituents. The water quality table reports constituent concentrations along a reach. A summary of temperature calculations may also be included.

2.6 Model Limitations

QUAL2E has been designed to be a relatively general program; however, certain dimensional limitations were imposed during program development (Brown and Barnwell, 1987). These limitations are:

- ! Reaches: a maximum of 50
- ! Computational elements: no more than 20 per reach or a total of 500
- ! Headwater elements: a maximum of 10
- ! Junction elements: a maximum of 9
- ! Point source and withdrawal elements: a maximum of 50

3. TECHNICAL DESCRIPTION OF THE QUAL2E IMPLEMENTATION IN WINDOWS

The QUAL2E Windows interface is designed to be as user-friendly as possible. The interface consists of 24 screens that cover all the data required by QUAL2E and QUAL2E-UNCAS. The first 20 screens represent the data for QUAL2E, and the last four screens are for QUAL2E-UNCAS. The screen input sequence for QUAL2E is given in Table 3.1. In general, the interface is divided into six data components: QUAL2E simulation control, a stream system, global variables, functional data, climatology data, and uncertainty analysis. The QUAL2E simulation control describes simulation control variables and number of reaches in the reach system. A complete stream system is described by the reach connection, element type, and a computational length. River reaches, which are aggregates of computational elements, are the basis of most data input. The global variables include number of constituents to be simulated, geographical and climatological information, option for plotting DO/BOD, and kinetics and temperature correction factors. The functional data provide flow data, reaction coefficients, and forcing functions. Initial conditions, boundary conditions, and point source loads are input as forcing functions. The global climatology data are required only for diurnal DO simulations. The uncertainty analysis (optional) data consist of types of uncertainty analyses, input and output conditions, and input variables with perturbations.

Of 24 screens, the first 3 screens where a complete stream system is entered are most important because the majority of the data on the following screens are dependent upon the information given by Screens 1-3. The stream system can be described by reach name, beginning and ending reach in terms of river miles or kilometers, and an indication of the headwater. The sequence of the reaches given on Screen 2 is used by the interface to display the reach connections. Each reach is then subdivided into computational elements of equal length, which are also displayed on the reach graphics screen. Once this information has been provided, the interface will automatically link all reaches to a stream system and assign the element types as headwaters, junctions, standards, or a downstream boundary on Screen 3.

There are seven different types of computational elements: headwater element, standard element, upstream element from a junction, junction element, downstream element, point source, and withdrawal element. A headwater element begins every tributary as well as the main river system, and therefore must always be the first element in a headwater reach. A standard element is one that does not qualify as one of the remaining six element types. An upstream element from a junction is used to designate an element on the mainstream that is just upstream of a junction. A junction element has a simulated tributary entering it. A downstream element is defined as the last element in a stream system. Point sources and withdrawals represent elements that have inputs (waste loads and unsimulated tributaries) and water withdrawals, respectively. Table 3.2 lists seven element types allowed in the QUAL2E input (represented below as numbers) and eight in the QUAL2E interface (indicated by capital letters).

Certain element types on Screen 3 are grayed out, such as headwater elements and junction elements. This means those types or fields cannot be changed. The only element types or fields that can be changed are the standard elements where the **Ss** are located. The standard elements could be further defined as point sources, withdrawals, or dams. The user should indicate the locations of point sources, withdrawals, or dams if they are applied. River reaches and computational elements are the basis of most data input. Screen 4 is used to identify water quality parameters to be simulated. As mentioned previously, QUAL2E can simulate up to 15 water quality constituents in any combination desired by the user. Constituents that can be modeled are:

- ! Dissolved oxygen (DO)
- ! Biochemical oxygen demand (BOD)

Table 3.1 Input Screen Sequence in QUAL2E Windows Interface

Data Component	Description of Input Data	Content		QUAL2E Data Type	Interface	
					Input File	Input Screen No.
1	QUAL2E Simulation control	Title, simulation type, unit, time-step		1	*.RUN	1
		Uncertainty analysis, flow augmentation, trapezoidal channels, no. of reaches				
2	Stream system	Reach ID and river miles/km, headwater, comp., length		2		2
		Element type for each reach		3		3
3	Global variables	Water quality (no. of constituents)		Title line		4
		Geographical & climatological data	Lat., long., dust., elev., evap.	1		5
		Plot DO/BOD	List reach numbers to be plotted			6
		Observed DO file		*.DO		7
		Global kinetics, temp. correct. factor		1A, 1B		8,9
4	Functional data	Flow	Flow augmentation	3		10
			Hydraulic data/local climatology	5, 5A		11
		BOD/DO, algae, N, P, reaction coefficient		6, 6A, 6B		12, 13
		Forcing function	Initial conditions	7, 7A		14
			Incremental inflow	8, 8A		15
			Headwater	10, 10A		16
			Point loads/withdrawals	11, 11A		17
			Dams	12		18
			Downstream boundary	13, 13A		19
5	Climatological data	Global climatological data file		*.CLI		20
6	Uncertainty Analysis	Sensitivity analysis, first order error analysis, Monte Carlo simulation		1-6, 9	*.UNS	21
		Input conditions, output				
		Input variables for sensitivity analysis		8		22
		Input variables for first order and Monte Carlo analyses		*.VAR		23
		Reach (element) numbers to be printed		7	*.UNS	24

Table 3.2 Element Types Used in QUAL2E

ELEMENT TYPE	QUAL2E INTERFACE	QUAL2E MODEL
Headwater	H	1
Standard	S	2
Upstream of a junction	U	3
Junction	J	4
Most downstream	E	5
Point source	P	6
Withdrawal	W	7
Dam	D	

- ! Temperature
- ! Algae as chlorophyll *a*
- ! Phosphorus cycle (organic and dissolved)
- ! Nitrogen cycle (organic, ammonia (NH₃), nitrite (NO₃), nitrite (NO₂))
- ! Coliforms
- ! Arbitrary nonconservative constituent
- ! Three conservative constituents

Water quality constituents can be simulated under either steady-state or quasi-dynamic conditions. If

either the phosphorus cycle or the nitrogen cycle is not being simulated, the model presumes they will not limit algal growth. Note that QUAL2E can simulate either ultimate BOD or 5-day BOD (BOD5).

The model simulates ultimate BOD in the general case. If the user wishes to use 5-day BOD for input and output, the program will internally make the conversion to ultimate BOD. On Screen 4, if only BOD is chosen, the ultimate BOD will be simulated; if both BOD and BOD5 are selected, the 5-day BOD input/output option is applied.

Geographical and climatological data are entered on Screen 5. Climatological data can be varied with reaches or constant throughout reaches depending on the simulation type. Temperature correction factors could be defaults by the model or user-specified. Also, if the user has observed DO data that are stored in a .DO file, that could be specified under **Observed Dissolved Oxygen file** on Screen 5. The observed data are stored on Screen 7.

Functional data are input on Screens 10 through 19. Flow characteristics of the reach system can be described by dispersion coefficients, discharge coefficients or a geographical representation (i.e., trapezoidal channels), and Manning's *n*. Flow augmentation may be applied when the DO concentration drops below some required target level.

4. MINIMUM SYSTEM REQUIREMENTS AND SOFTWARE INSTALLATION

4.1 Minimum System Requirements

The system runs under Microsoft® Windows™. The minimum system requirements are provided below:

- ! Windows Version 3.1
- ! 80386 processor
- ! 4 megabytes RAM
- ! 10 megabytes hard disk space

NOTE: A math coprocessor is recommended but not required.

4.2 Installing the Software

STEP 1. Insert the QUAL2E Setup Disk (i.e., QUAL2E - DISK 1) into drive A or drive B.

NOTE: You must have 10 megabytes of space on the hard disk drive on which you are install-

ing QUAL2E for Windows. **Close all open applications, including FILE MANAGER, before you start the setup program.**

STEP 2. Start Windows, and then choose File * Run.

STEP 3: Type A:SETUP (or B:SETUP if the disk is in the B drive). Click on the OK button or press ENTER.

STEP 4: You will be asked to enter the location of the directory where you would like QUAL2E to be loaded. When you confirm this or enter a new directory, the loading will begin.

Please note that the QUAL2E Windows interface consists of two disks.

STEP 5. You are now ready to use QUAL2E.

5. USING THE QUAL2E WINDOWS INTERFACE

Once you have finished loading the software, you will be ready to access the QUAL2E Windows interface. This section details how to use the capabilities available in the QUAL2E interface. It describes the following:

- ! Accessing an Existing File or Opening a New File
- ! File Naming Conventions
- ! Saving Input Files
- ! Setting Up a Default Editor for Viewing Output Files
- ! Submitting an Input File to the Model
- ! QUAL2E Windows Interface Commands and Function Keys
- ! Import File Option in QUAL2E
- ! How to Use the Graphics Routine
- ! Array Screen Capabilities
- ! Unit Conversion

5.1 Accessing an Existing File or Opening a New File

When you first enter the QUAL2E Windows interface, you will be automatically assigned a new file. The new file name and number will appear at the top of the screen in parentheses, for example, (QUAL2E###.INP).

To access an existing file, click on the FILE option on the very top line, select the OPEN option, and select the file you want from the list that appears. If you made any changes to the previously opened file, you will be asked whether you want to save the file. This is to remind you that opening a new file will overwrite the existing screens. The QUAL2E Windows interface does not allow you to open more than one input file concurrently.

NOTE: The input files must be in the same location as the *.EXE files (the QUAL2E executable files). If you elect to read in an existing file from a different directory, the directory in which the file is located becomes the default directory for QUAL2E. All the data files for QUAL2E must exist in the default directory. It is strongly recommended that you not save input files in any location other than the QUAL2E directory.

5.2 File Naming Conventions

All files created by QUAL2E in Windows have a file naming convention as explained below:

1. The first five characters are the function name (i.e., QUAL2E); the next three digits are sequentially assigned numbers that indicate the number of the input file that you are currently creating.
2. The file extension indicates the type of file, as explained below:

<u>File Names</u>	<u>Description of the file</u>
QUAL2E###.INP	QUAL2E Windows Interface Input file This file contains all the input data required for QUAL2E in one file.
QALGR###.INP	QUAL2E Windows graphics file This file contains all the input data that were entered to create a particular graph.

The following input files are generated by the QUAL2E Windows interface when you choose to submit the QUAL2E###.INP file to the model for execution. These files can be read by the interface later through an IMPORT function. These files will be in your directory.

QUAL2E###.RUN	QUAL2E input file
---------------	-------------------

QAL2E###.DO	Observed Dissolved Oxygen data file
QAL2E###.CLI	Climatology data file
QAL2E###.UNS	Uncertainty input file
QAL2E###.VAR	Variance uncertainty input file

Note that the QAL2E###.RUN file is always required for a QUAL2E execution. It is the actual input file for the program. The RUN file is generated by the QUAL2E Windows interface prior to executing the program. You have the option of importing an existing RUN file into the QUAL2E Windows interface. Always save your current file before importing a RUN file because the imported file will overwrite all the values on the screens without giving you a choice. Other input files are optional depending on the data availability and the simulation type. The DO file is used when observed DO data are available. The CLI file is needed for quasi-dynamic simulations. The UNS and VAR files are needed for the uncertainty analysis. Two additional files are generated by the program: QAL2E###.DOU and QAL2E###.RCH. These files remain invisible. A schematic of all the files and their uses is given in Figure 5.1.

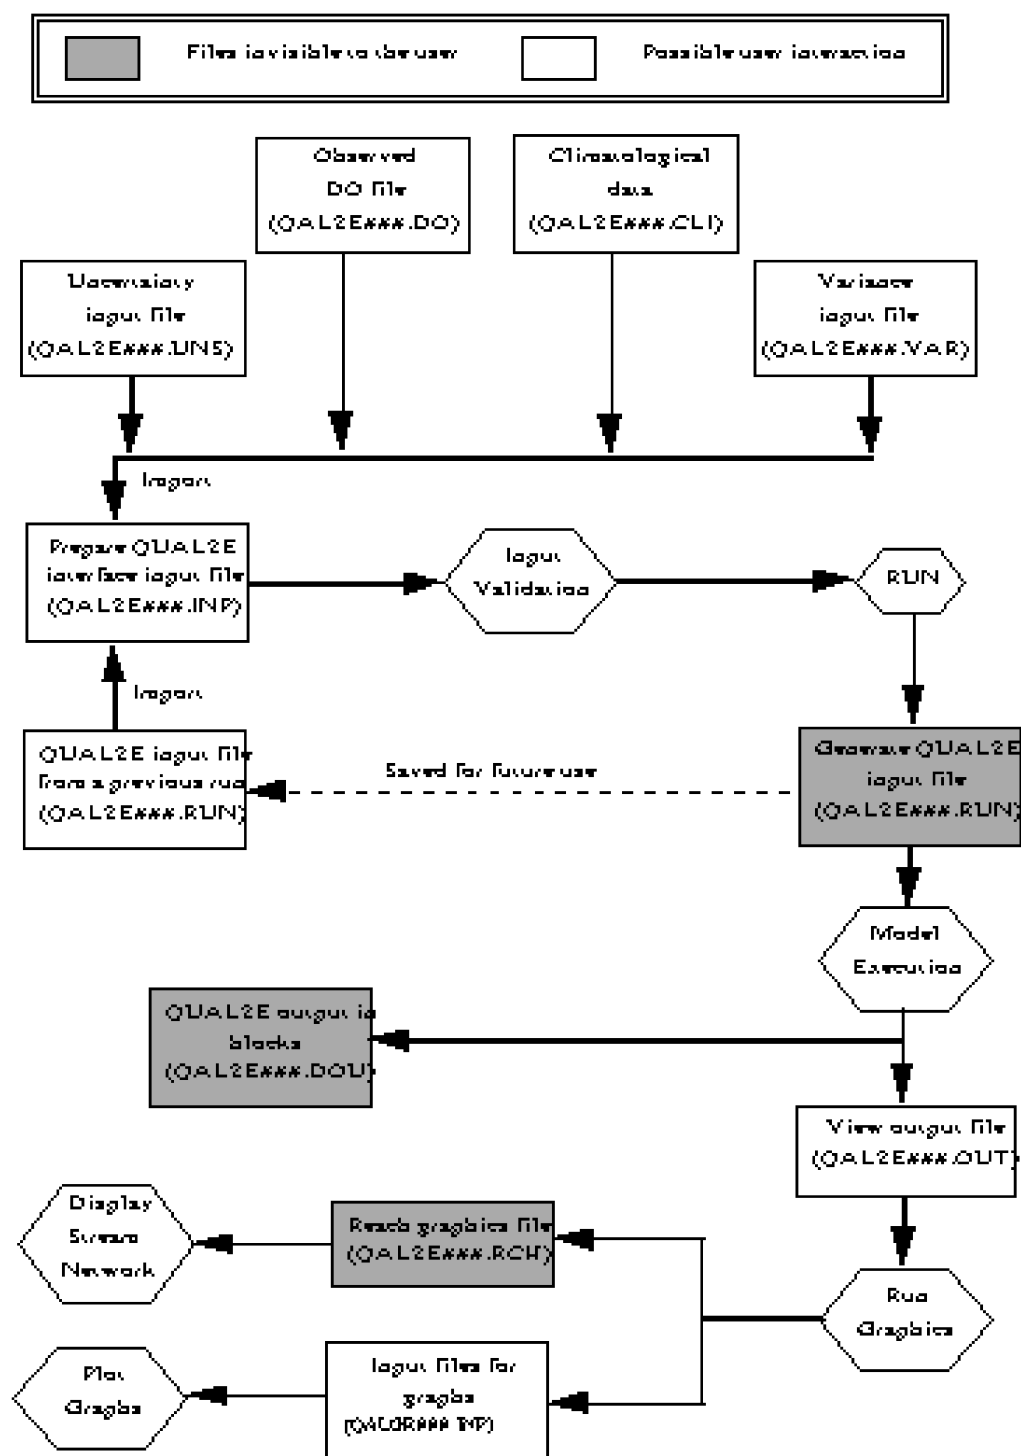


Figure 5.1 Different Files and Their Usage in a QUAL2E Model Run.

Output Files

These files are generated by the QUAL2E model:

QUAL2E###.OUT	QUAL2E model tabulated output file
QUAL2E###.DOU	Simulation results in data blocks

5.3 Saving Input Files

If you opened an existing file to edit, when you choose to save the file, the existing interface input file will be overwritten with the new values unless you choose the SAVE AS option under FILE menu and assign a new file name. If you are assigning a new name to a file, remember to follow the naming conventions described in section 5.2.

QUAL2E will ask you whether you wish to save the interface input file when you exit the interface functions or when you reach the last screen of an interface function. However, if you have accessed an existing file and made all the changes before reaching the last screen, you may save the input file by proceeding to the FILE option and selecting the SAVE option. Once you have completed an interface input file, you may submit it to the QUAL2E model for execution. When you submit the interface input file to the model, the input file will be validated by the Windows interface. If any error is detected (e.g., a BOD decay value of more than 2 or a latitude value outside the range of 0-90 degrees) during the validation, you will be informed of the error and taken to the incorrect entry so that you can correct it immediately.

5.4 Setting Up a Default Editor for Viewing Output Files

The default editor for viewing and editing QUAL2E output files is the WRITE program in Windows. However, you may choose any other data editor (e.g., EDIT.EXE) for viewing the output by selecting the Utilities menu on the top menu bar of the screen and using the Setup Output File Viewer option. The path and executable name of the output file editor should be specified under this option. If you do not have any special text editor to choose, you may check the default WRITE.EXE setup using the above-mentioned procedure.

After each execution of QUAL2E from the Windows interface, you will be asked whether you want to view the OUT file. If you decide to see the output, the *.OUT file will be opened using the editor of your choice. It is important to note that the QUAL2E Windows interface does not have any button or menu item that allows you to see an existing output file without running the program. You may want to use WRITE in the ACCESSORIES group of the Windows Program Manager to open, edit, and save an output file at any time. Select all the texts in the file (by clicking before the first character of the output file and dragging the mouse pointer to the end while keeping the left mouse button pressed), and choose the landscape option in Print Setup under FILE menu to avoid wraparound of text. Additionally, when the text is selected, you may switch to a fixed width font, such as Courier or Line Printer, to see the text vertically aligned. Click on the Fonts option under the Character menu to open the font selection box.

5.5 Submitting an Input File to the Model

When you have completed the input file for the interface that you are in, select the RUN button to run the model with the input file you created. When you select the RUN option, all the entries in the file will be validated. If any errors are detected during the validation, QUAL2E will put up a message informing you of the type of error detected and will then take you to the prompt that is incorrect. Once all valid entries are made, the file is submitted to the appropriate model for execution. An icon will appear at the bottom of the screen for those blocks for which the QUAL2E model is called. When the processing of the interface input file is complete, QUAL2E will execute and will ask you whether you want to view the output file. If you indicate that you wish to view the output file, QUAL2E will show it using a text editor. You can annotate the results if you choose to do so. To exit from the WRITE text editor, choose Exit from the File menu or press the ALT and F keys simultaneously (ALT-F); then press the X key. You will return to the interface screens.

5.6 QUAL2E Windows Interface Commands and Function Keys

All the Windows interface screens have a series of "buttons" immediately below the menu bar to make frequently used commands easily accessible. These buttons and the commands they represent are accessible in three ways: (1) click on a button with the left mouse key to perform the function it names, (2) press the ALT key along with the underlined letter in the button title (e.g. ALT-N for the next screen), or (3) click the left mouse button on the Tool menu and select one of the options listed underneath. However, to activate the Graphics option, click on the Utilities menu instead of the Tool menu and select Graphics.

The buttons and the commands they represent are explained below:

NEXT Button This option allows you to move to the next screen in the interface. If there are incorrect values on the screen in which you are working and you attempt to move to another screen, QUAL2E will inform you of the error and allow you the option of going back (and correcting the error at a later time) or correcting the error before moving on. The cursor will blink at the prompt

with the incorrect entry if you elect to correct the error before moving on.

BACK button This button allows you to move back one screen. If there are incorrect values on the screen in which you are working and you attempt to move to another screen, QUAL2E will inform you of the error and allow you the option of going back (and correcting the error at a later time) or correcting the error before moving on. The cursor will blink at the prompt with the incorrect entry if you elect to correct the error before moving on.

INDEX Function Instead of moving backward and forward through the screens, you may use the INDEX feature to hop back and forth between screens. To access this feature, position the cursor over the INDEX button and click with the mouse button, or enter ALT-N. All the screens available in this option will be displayed with the screen titles. Certain screens will be grayed out, indicating that these screens are not accessible due to the selections made on other screens. The screen that you were in when you selected the INDEX button will be highlighted in blue text.

If you wish to see the prompts that appear on each screen, press the EXPAND button at the bottom of the INDEX screen. The screen names and numbers will then include all the prompts contained in the screens. You may contract the screen again to the normal display of just the screen names and number by clicking on the CONTRACT button.

To move to the screen that you want, position the cursor over the screen number of any non-gray screen and click the left mouse button. You are taken immediately to that screen. To exit the INDEX screen and return to the previous screen, click on the CANCEL button.

HELP button This option allows you to access the on-line help for the QUAL2E Windows interface. Two different types of help are available: **Prompt-Level Help**, which contains information on the specific prompt on which your cursor is located or on which you are entering data, and **General Help**, which contains a general description of the QUAL2E system.

To access **General Help**, move the cursor to the button bar and the click on the HELP button, or press ALT-H from the keyboard. A menu will ap-

pear. Select the HELP INDEX option or enter I from the key board. A window will appear with a screen title "Description of this run." Click on the Search button on the Help Screen to find a topic. You can type in the topic or scroll through the list of available topics. When you find the topic you are looking for, click the left mouse button on the topic twice and then click on the GO TO button.

To access **Prompt-Level Help**, move the cursor over to the prompt on which you would like information and press the **F1** function key or click on the HELP button.

When you are finished viewing Help, exit the Help window either by entering ALT-F, X from the keyboard or by double-clicking the left mouse button on the icon located at the top left corner of the window. You will be returned to the screen in which you were previously working.

CALC button This option allows you to access the Calculator Function within Windows, should you require the use of a calculator at any screen in QUAL2E. You may invoke a scientific calculator by clicking on the View menu of the calculator and selecting Scientific.

TOP button This option allows you to move to the first screen in QUAL2E from any screen without having to use the INDEX function.

RUN button This option allows you to submit an interface input file that you have created to the QUAL2E model for execution. If incorrect entries are present in the file when you click on this button, QUAL2E will inform you that you have incorrect values and will take you to the appropriate prompt so that you can correct the value and resubmit the file.

RESTORE button This option allows you to restore the default values that were in the file before you started making changes for a screen. This is an option that allows you to replace preexisting values on a particular screen without having to exit the system or go back to every variable that you changed. However, if you move to another screen, all the changes become permanent.

GRAPHICS button This option allows you to graph the QUAL2E output results. There are two types of graphs: flow vs. distance and pollutant concentrations vs. distance along the river system. The graphics routine also has the capability of

drawing the network connections of the river system.

5.7 Import File Option in QUAL2E

The import file option allows you to access existing input files that are generated from other model runs. The QUAL2E interface can import all five input files: .RUN, .DO, .CLI, .UNS, and .VAR files. (See Section 5.2, File Naming Conventions.) The IMPORT option can be used to access any one of these five types of files. The filename indicates the type of data that the file contains. For example, if you import a file with a DO extension, it will replace all data on the Observed Dissolved Oxygen Screen. This option allows you to mix and match different types of data.

The IMPORT option can be selected from the menu bar at the top of QUAL2E interface window. Click on IMPORT to see a list of the five types of import files. Once you select the file type you want, you will see a window similar to the Windows Open File option, except that only one type of file will be listed. Move your cursor over the file that you would like to import and click twice in quick succession to bring the data into the QUAL2E interface. If you click only once on a filename, a short description of the file will be shown in a box at the top of the window.

5.8 How to Use the Graphics Routine

The Graphics Program can be accessed by clicking on the Graphics button with the mouse. A window similar to the QUAL2E Windows interface will appear. You can select two types of graphics: display of reaches and graphs. When a QUAL2E output file is selected, you can click on the REACHES button to view the entire stream network. There two options for plotting graphs: flow vs. distance and concentration of a water quality constituent vs. distance. The graph plotting option is provided to allow you to represent the results in easy-to-understand formats.

The steps that you should follow are explained below:

- STEP 1. The graphics option is accessible through a GRAPHICS button on the third line from the top of the QUAL2E Windows interface screen. It is also accessible using the Graphics option under the Utilities menu (ALT-U, G).
- STEP 2. The Graph Selection screen will appear. You must first select a QUAL2E output

	file. To see a list of the files that exist in your default directory, click on the arrow to the right of the filename box. From the pull-down menu, select the file that you would like to use as input for graphics.	WordPerfect) and choose Paste or Paste Special to complete the cut-and-paste function.
		The features and limitations of the graphics program include:
STEP 3.	Select the type of graph from the list provided. Then specify a starting reach and an ending reach. If the starting reach and the ending reach are not in the same branch or the ending reach is not located downstream from the starting reach, you will see a message informing you that you need to make another selection.	! The graphics routine can draw up to three pollutants for one graph. It can display two pollutants with two Y-axes for one graph.
STEP 4.	Click the RUN button when you have made all the selections on the first screen. You will see a box informing you that the selections you made will be saved under the filename shown at the top of the screen (e.g., QALGR001.INP).	! You can display up to four graphs at a time. You need to create the first three graphs by going through the graph plotting cycle three times and entering a new file name each time. (This is the file name shown at the top of the screen: QALGR###.INP for the QUAL2E graphs.) To change the file name, click on the File menu and choose New from the Graph Selection screen. If you do not select a new file name, when you hit the RUN button the new graph will overwrite the previously drawn graph. Finally, you need to go through a fourth cycle in which you plot the fourth graph, select all four graph files in the Graph Selection pop-up window, and choose OK.
STEP 5.	Next you will see a list of files in a box with the title GRAPHIC SELECTION. The file that was just generated will be selected. You may select up to four graphs from the list presented. Choose OK to draw the graphs.	! The observed DO data cannot be plotted along with model predicted values.
STEP 6.	The graphs that you selected will be drawn on the screen. Once drawn, you have two options:	
	PRINT: To print the graphs(s) on the screen, select the GRAPH option at the top of the screen and select PRINT. The file will be printed to the default Windows printer.	
	EDIT: This option allows you to copy the image and paste it to any Windows application through the Clipboard. To do this, click on EDIT at the menu bar and select COPY. Then switch to the target Windows application (e.g.,	

5.9 Array Screen Capabilities in QUAL2E

There are many array screens in QUAL2E, such as hydraulic data, initial conditions, and others. At these screens, you have two additional capabilities that are not available on regular screens in QUAL2E.

1. EDIT: Copy and Paste

This option is available from the menu bar at the top of the Window (ALT-E). You can use this capability to copy/cut a selected block of data (either rows or columns or both) and paste it to another area if the same data are to be duplicated or you can use it to copy data from a spreadsheet program where you might have data (e.g., climatological data) and paste it for use by QUAL2E. To select a block, click the left mouse button on the top left cell of the desired block and drag the mouse to the bottom right cell, keeping the left mouse button pressed. The first cell selected will be highlighted rather than in reverse video as are the remaining cells in the area that you have

selected. Choose Copy or Cut from the Edit menu, depending on what you would like to do. To paste the block that you just copied, move to the area to which you want to copy the block and select the Paste option from EDIT. You will see a message warning you that any data existing in the selected area will be overwritten.

To select a block that is larger or wider than a screen, proceed to the cell that will begin your block and click with the left mouse button. Then move the screen by clicking on the scroll bars so that you can view the last cell in the desired block, position the cursor above the last cell, and press the SHIFT key and the left mouse button simultaneously. This will highlight the area that you want.

2. Arithmetic Box

One of the key features of the QUAL2E Windows interface is its ability to provide mathematical calculations in columns so that you can easily change certain rows of values in an array screen (the

screen where the same variable requires a row of entries).

This feature is selected by clicking on the variable title in any array, for instance, TEMP (initial temperature in the reach). A window will pop up, allowing you to do arithmetic operations for a specific number of rows in that column. You will be able to access an arithmetic function that allows you to add, subtract, multiply, or divide any single or range of values for that variable. For example, you might choose to add 3 degrees to all the values in the temperature array by using the arithmetic function.

5.10 Unit Conversion

The QUAL2E interface permits the use of either metric or U.S. units. A conversion routine has been developed for the QUAL2E interface to allow a variable's unit to be changed from one type to another. If you choose U.S. units at the beginning of the process for generating an interface input, the unit titles and default values for the variables will be supplied to the interface. If you decide later to change to metric units, the Windows interface will display a message asking whether you want the variables converted from one unit to another. If you choose YES, the interface will display the appropriate units and do the conversion for the variables that require a unit. If you choose NO, the interface will only provide the unit titles for the variables and will not convert the values.

6. EXAMPLE RUNS

This section contains three example runs to illustrate how to make the best use of the QUAL2E Windows interface. The example runs were selected in an attempt to exercise the major portions of the QUAL2E interface. A matrix of QUAL2E interface with the various runs is shown in Table 6.1. The QUAL2E interface generates five different input files. For a base QUAL2E run, a RUN file is required; an observed DO file is needed when there are observed data; a CLI file is applied if there are data for quasi-dynamic (i.e., diurnal variations) simulations. For an uncertainty analysis run, an UNS file and a VAR file are needed in addition to a RUN file and/or a DO file. The first example is designed to simulate three water quality constituents: temperature, dissolved oxygen (DO), and ultimate carbonaceous BOD (CBODU) in a steady state mode with metric units. The second example includes a QUAL2E uncertainty analysis in which all five input files are generated by the interface with U.S. units. The last example performs a quasi-dynamic/diurnal simulation for most of the conventional pollutants.

These examples were obtained from EPA and demonstrate the potential applications of the QUAL2E/QUAL2EU model. The interface runs can be checked using the input files supplied by EPA along with the distribution package for QUAL2E. The example input files prepared for testing the QUAL2E Windows interface and corresponding files used for QUAL2E are listed in Table 6.2.

6.1 Example 1 - Dirty River Reaches DO/BOD/TEMP Simulation

This is an example of the QUAL2E model's ability to simulate three water quality constituents: temperature, dissolved oxygen (DO), and ultimate carbonaceous BOD (CBODU) in a steady state mode with metric units. A sketched stream system for a study area is shown in Figure 6.1. The network connections and computational elements for Example 1 are shown in Figure 6.2. The data that are presented consist of the following:

A. Flow data

From gaged data and drainage area ratio analysis, the following information was developed:

- | | |
|-------------|---|
| 1. Reach 1 | Flow at the headwater of Dirty River = 0.5 m ³ /s |
| 2. Reach 1 | Point source discharge from the STP = 0.48 m ³ /s |
| 3. Reach 1 | Incremental flow in Dirty River above junction with Clear Creek = 1.241 m ³ /s |
| 4. Reach 2 | Reservoir release into Clear Creek = 0.38 m ³ /s |
| 5. Reach 2 | Incremental flow in Clear Creek above junction with Bull Run = 0.388 m ³ /s |
| 6. Reach 3 | Flow at headwater of Bull Run = 0.14 m ³ /s |
| 7. Reach 3 | Incremental flow in Bull Run = 0.003 m ³ /s |
| 8. Reach 4 | Incremental flows = 0.015 m ³ /s |
| 9. Reach 5 | Incremental flows = 0.015 m ³ /s |
| 10. Reach 6 | Incremental flows = 0.108 m ³ /s |
| 11. Reach 6 | Withdrawal at the diversion = 0.5 m ³ /s |

Figure 6.3 (a), (b), and (c) show the screen where these data are entered.

B. Hydraulic data

These data come from past gaged data and special survey data on velocities and depths.

- | | |
|----------------|--|
| 1. Dirty River | Vel = 0.25 Q ^{0.30} ,
Depth = 0.44 Q ^{0.55} |
| 2. Clear Creek | Vel = 0.38 Q ^{0.37} ,
Depth = 0.51 Q ^{0.61} |
| 3. Bull Run | Vel = 0.28 Q ^{0.35} ,
Depth = 0.48 Q ^{0.58} |
| 4. Pond | Vel = 0.065 Q ^{0.85} ,
Depth = 1.1 Q ^{0.05} |

Table 6.1 Example Run Matrix for QUAL2E Windows Interface

Component	EXAMPLE RUN		
QUAL2E	1	2	3
Simulation			
Steady state	€	€	
Dynamic			€
Water quality constituents			
Temperature	€	€	€
CBODU	€	€	€
DO	€	€	€
Algae		€	€
Phosphorus		€	
Nitrogen		€	€
Fecal coliform			€
Non-conservative			
Conservative			
Observed DO data	€	€	
Temperature correction factors			
Default		€	
User-defined	€		€
Climatological data			
Reach variable			
Global	€	€	€
Functional data			
Headwaters	€	€	
Point sources/withdrawals	€	€	
Dams	€		
Flow augmentation			
Downstream condition		€	
Trapezoidal channels			
Uncertainty analysis			
Sensitivity			
First order error		€	
Monte Carlo			
Units			
U.S. units		€	
Metric	€		€

Table 6.2 Example Input Files with QUAL2E Windows and QUAL2E

Example	Type of File	QUAL2E Interface	QUAL2E Model
	QUAL2E Windows Interface Input	QAL2E001.INP	
	QUAL2E Input	QAL2E001.RUN	WRKSHOP1.DAT
	Measured Dissolved Oxygen Input	QAL2E001.DO	WRKSPDO.DAT
2	QUAL2E Windows Interface Input	QAL2E002.INP	
	QUAL2E Input	QAL2E002.RUN	WTHBASE1.DAT
	Measured DO Input	QAL2E002.DO	WTHDO.DAT
	Uncertainty Input	QAL2E002.UNS	WTHUAF1.DAT
	Variance uncertainty Input	QAL2E002.VAR	WTHINV.DAT
3	QUAL2E Windows Interface Input	QAL2E003.INP	
	QUAL2E Input	QAL2E003.RUN	DIURNL.DAT
	Climatology Input	QAL2E003.CLI	DINTMP.DAT

Contains Data for
Postscript Only.

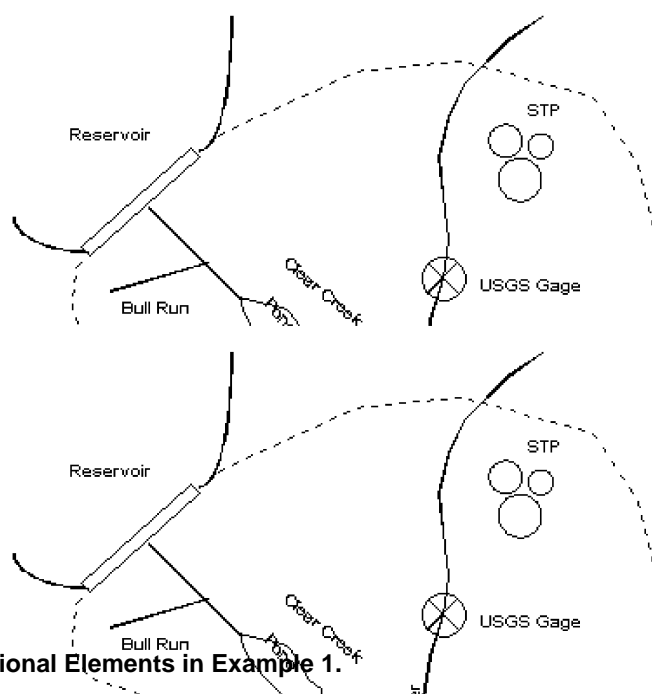


Figure 6.2 Computational Elements in Example 1.

Figure 6.1 Sketched Stream System for a Study Area.

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

FLOW (m3/s) (1): 0.261

REACH NO.	FLOW (m3/s)	TEMP (C)	DO (mg/l)	BOD (mg/l)	CONC 01	CONC 02	CONC 03	...
1	0.261	18.	1	20.				
2	0.008	18.	1	5.				
3	0.003	18.	1	5.				
4	0.015	18.	1	5.				
5	0.015	18.	1	5.				
6	0.108	18.	1	50.				

(a)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

FLOW (m3/s) (1):

HEADWATER NAME	FLOW (m3/s)	TEMP (C)	DO (mg/l)	BOD (mg/l)	CONC 01	CONC 02	...
DIRTY RIVER	0.5	22.	8.3	1.7			
CLEAR CREEK	0.38	15.	0.	2.			
BULL RUN	0.14	21.	5.	20.			

(b)

Figure 6.3 Entering Data in QUAL2E Windows Interface Screens.

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

NAME (1): RIVR CTY STP

REACH NO.	REACH NO.	NAME	TREAT (%)	FLOW (m3/s)
1	5	Point source	0	0.48
6	5	Wetland	0	-0.5

(c)

5. Dirty River below Clear Creek

$$\text{Vel} = 0.22 Q^{0.3}, \text{Depth} = 0.43 Q^{0.48}$$

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

DISPER CONST (1): 60.

REACH NO.	DISPER CONST	Q COEFF VEL	Q EXP VEL	Q COEFF DEPTH	Q EXP DEPTH	MANNING
1	60.	.25	.30	.44	.55	.04
2	60.	.38	.37	.51	.61	.04
3	120.	.28	.35	.48	.58	.04
4	6000.	.065	.95	1.1	.05	.04
5	200.	.38	.37	.51	.61	.04
6	400.	.22	.33	.43	0.38	.04

(d)

Figure 6.3 (continued)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

ADAM COEFF (1): 1.25

REACH NO.	ADAM COEFF	BDAM COEFF	% FLOW OVER DAM	HEIGHT DAM (m)
5	1.25	1.1	1	3

(e)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

BOD DECAY (1/day) (1): 0.6

REACH NO.	BOD DECAY (1/day)	BOD SETTLING (1/day)	SOD RATE (g/m2-day)	TYPE REAERATION
1	0.6	0	0.5	Thackston and Krenkel
2	0.6	0	0	O'Connor and Dobbins
3	0.6	0	0	O'Connor and Dobbins
4	0.6	0.1	1	O'Connor and Dobbins
5	0.6	0	0	O'Connor and Dobbins
6	0.6	0	0.5	Thackston and Krenkel

(f)

Figure 6.3 (continued)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

BOD DECAY (1/day) (1):

REACH NO.	BOD DECAY (1/day)	BOD SETTLING (1/day)	SOD RATE (g/m ² -day)	TYPE REAERATION
1	0.6	0	0.5	Thackston and Krenkel
2	0.6	0	0	O'Connor and Dobbins
3	0.6	0	0	O'Connor and Dobbins
4	0.6	0.1	1	O'Connor and Dobbins
5	0.6	0	0	O'Connor and Dobbins
6	0.6	0	0.5	Thackston and Krenkel

(g)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

BOD

Decay

Settling

DO

Reaeration

SOD uptake

Nitrogen

Phosphorus

Algae

Non-conservative

(h)

Figure 6.3 (continued)

File Edit Tool Utilities Import Help

Help Next Back Top Index Run Restore Graphics Calc

Latitude [deg] 42.5

Longitude [deg] 83.3

Standard meridian [deg] 75

Basin elevation [m] 150

Dust attenuation coeff. 0.13

Evaporation coefficient

AE [(m/hr)/mbar] 0

BE [(m/hr)/(mbar-m/s)] 5.55e-6

Temperature correction factors

☐ Default

☒ User specified

Climatological Data

☐ Reach variable temp.

☒ Global values

Climatological file

Output Print

☐ Summary

☒ Climatological data printout

☒ DO and BOD plot

Number of DO/BOD plots 2

Observed Dissolved Oxygen file WRKSHOP1.D

(i)

Figure 6.3 (continued)

6. Dam information for reaeration:

- All of the flow passes over the crest of the dam.
- The dam has a height of 3 meters and acts as a weir with free-falling flow.
- Assume $a = 1.25$ and $b = 1.1$.

7. Manning's n is assumed constant for all reaches, with a value of 0.04.

Hydraulic data are entered on the screens shown in Figure 6.3 (d) and (e).

C. Water quality data

1. Incremental inflow water temperature = 18.0°C

2. Incremental DO = 1.0 mg/l for all reaches

3. Incremental CBODU

= 5.0 mg/l for Clear Creek and Bull Run

= 20 mg/l for Dirty River above Clear Creek

= 50 mg/l for Dirty River below Clear Creek

4. Headwater quality

Dirty river: DO = 8.3 mg/l, CBODU = 20.0 mg/l, $T = 22.0^{\circ}\text{C}$

From reservoir: DO = 0.0 mg/l, CBODU = 10.0 mg/l, $T = 15.0^{\circ}\text{C}$

Bull Run: DO = 5.0 mg/l, CBODU = 5.0 mg/l, $T = 21.0^{\circ}\text{C}$

These water quality data are entered on the same screens as those for flow data, Figures 6.3 (a) and (b).

D. Sediment oxygen demand

Samples showed the following:

1. 0.5 gm/m³-day for Dirty River above Clear Creek

1. 0.5 gm/m³-day for Dirty River above Clear Creek
2. 1.0 gm/m²-day for Pond
3. 0.5 gm/m²-day for Dirty River below Clear Creek

Sediment oxygen demand data are entered on a screen titled as "BOD and DO reaction rate constants," shown in Figure 6.3(f).

E. Point source (or discharge) and withdrawal data

1. Point source: $Q = 0.48 \text{ m}^3/\text{s}$, $\text{DO} = 4.0 \text{ mg/l}$, $\text{CBODU} = 5.0 \text{ mg/l}$, $T = 25.0^\circ\text{EC}$
2. Withdrawal: $Q = 0.5 \text{ m}^3/\text{s}$

These data are entered on the screen shown in Figure 6.3(c).

F. Reaction rates

1. The bio-oxidation rate for CBODU was determined from long-term BOD tests:
 - For all reaches of the Dirty River, $K_1 = 0.6$ per day.
 - For all reaches of Clear Creek and Bull Run, $K_1 = 0.6$ per day.
2. The BOD settling rate is zero, except in the pond where it is 0.1 per day.
3. The reaeration coefficient is to be calculated by the O'Connor and Dobbins method (Option 3) for all reaches of the Clear River and Bull Run, and it is to be computed by the Thackston and Krenkel method (Option 5) in all reaches of the Dirty River.
4. Temperature adjustments to the reaeration rate coefficient are to be made using the O'Connor and Dobbins theta value (1.0159).

Decaying and settling rates of biochemical oxygen demand are entered on the same screen as for SOD. Temperature adjustments to the rate coefficients are made in the Temperature Correction Factors screen, shown in Figure 6.3(h).

G. Temperature information

1. Evaporation coefficient: Use Lake Hefner equation $\text{AE} = 0.0$ and $\text{BE} = 0.0000056$.

2. Dust attenuation coefficient = 0.13
3. Location of basin: metropolis; longitude = 83.3, standard meridian = 75, Latitude = 42.5, Basin elevation = 150 m
4. Local climatology: cloudiness = 0.25, Dry bulb temperature = 25.0 $^\circ\text{EC}$, wet bulb temperature = 20.0 $^\circ\text{EC}$, atmospheric pressure = 980 mbar, wind speed = 2.5 m/s.

These data are provided in the Geographical and Climatological data screen, as shown in Figure 6.3 (i).

The steps that you must follow for this example are explained in detail below:

STEP 1. Select the QUAL2E Windows interface by clicking twice on the QUAL2E icon.

STEP 2. Select an existing file called QAL2E001.INP in the QUAL2E interface by selecting the File option, followed by the Open option. The file will be loaded into the QUAL2E interface. A total of 24 screens are available to you when you click on the INDEX button that illustrates the overall structure of the input file. (The other screens are grayed out due to choices made in the sample run.) Normally, QUAL2E requires you to provide information on the reach system of the study area, simulation control variables, functional data, and climatology data. Since you are retrieving an existing input file, you are not required to do this.

STEP 3. Examine the input file in detail and familiarize yourself with it by using the NEXT and BACK buttons to move through the screens and the HELP button to obtain general and detailed information about the interface and specific prompts. Areas on which you should focus are given below:

How to describe a complete stream system

The first three screens are most important because the majority of the data on the following screens are dependent upon the information given by Screens 1-3. First, you must enter the number of reaches in the system on Screen 1. If you do not enter this number, the interface will not let

you access other screens. Then, you are required to give the reach name, beginning and ending river miles or kilometers for each reach, an indication of the headwaters, and an element length. The sequence of the reaches that you provide on Screen 2 should always be entered from the most upstream reach to the most downstream reach. The element length is a computational unit that has to be divisible by all reaches. The information on Screen 2 will be used to display the reach connections. Remember that river reaches and computational elements are the basis of most data input. It is suggested that you draw a reach network system before entering the data.

How to use the unit conversion

The unit selection appears on the first screen. The QUAL2E interface permits two sets of units: metric and U.S. units. Metric units, for example, are selected for Example 1 (QAL2E001.INP). If you want to change to U.S. units, you can simply click on U.S. units. Then a windows message will ask you whether you would like to convert all the variables from metric to U.S. units or just change the unit titles for the variables' values. At this point, you need to choose YES, NO, or Cancel.

Select YES to convert all the variables from one unit to another. Select NO to change the unit titles for the variables' required units. Select Cancel to return to the original unit selection.

Certain important screens are detailed below.

Screens 1

The stream simulation is set to be steady state. Metric units are chosen for the model input and output. Since there is no uncertainty analysis involved for this example, Screens 21-24 are grayed. Similarly, Screen 10 is grayed because flow augmentation is not applied. The number of reaches in the stream system is six.

Screen 4

This screen lists 15 water quality constituents that can be simulated. Select the

constituents that you want to simulate. Three constituents are selected in Example 1.

Screen 5

Screen 5 defines the basin geographic information, temperature correction option, climatological data, and DO/BOD plot. You can define the temperature coefficients or use the model default values. Climatological data can be varied from one reach to another or specified as constant values for all reaches. The DO/BOD plot is an option for the model input. It is applied when a user has observed DO data and wants to calibrate the model to compare the predicted DO with the observed DO. You can either select an existing DO file, which contains the data, or indicate the number of points for each BOD/DO plot and enter the measured data on Screen 7. Example 1 chooses to select an existing DO input file, called WRKSHOP1.DO, and the data can be seen on Screen 7.

STEP 4. Submit the QUAL2E interface input file to the QUAL2E model for execution by clicking on the RUN button. An icon appears at the bottom of the screen with the words QUAL2E MODEL EXECUTION. When the processing is complete, a message appears: "QUAL2E completed. Do you want to view the output file?" Select OK to view the output using the default editor. After viewing the tabulated output, press ALT-F and X in sequence to return to the QUAL2E main menu.

STEP 5. You might also want to plot a QUAL2E graphic. Click on the Graphics button. Select a QUAL2E output file (e.g., QAL2E001.OUT). Once you have chosen the QUAL2E output, click on the Reaches button to view a network diagram of the stream network and computational elements. This plot should be similar to Figure 6.2. If you want to make a hard copy for the plot, you can use the Print option to send the plot directly to the printer or use the Edit and Copy/Paste option to place the graph in another Windows package such as the Clipboard.

ALT-F and X in sequence to return to the QUAL2E main menu.

STEP 5. You might also want to plot a QUAL2E graphic. Click on the Graphics button. Select a QUAL2E output file (e.g., QAL2E001.OUT). Once you have chosen the QUAL2E output, click on the Reaches button to view a network diagram of the stream network and computational elements. This plot should be similar to Figure 6.2. If you want to make a hard copy for the plot, you can use the Print option to send the plot directly to the printer or use the Edit and Copy/Paste option to place the graph in another Windows package such as the Clipboard.

To graph flow vs. distance, click on flow vs. distance as the type of graph, and then define the starting reach as 1 and ending reach as 6. Click the Run button to view the graph.

To graph water quality constituents, select water quality constituents as the type of graph and define the starting and ending reaches. When you click on Run, a Pollutant Selection screen will appear with a list of pollutants. Select the pollutants you want to plot and click on Run again. A window will list all the graphs in the default directory. Select the graphs you would like to see and choose OK. QUAL2E Graphics allows you to draw up to four graphs on the same screen. To do this, you should create different graphs and then select up to four graphs that you want to see on one screen. An example QUAL2E graph is provided in Figure 6.4.

6.2 Example 2—Withlacoochee River QUAL2E and Uncertainty Analysis

This exercise demonstrates how to use the uncertainty analysis option. A QUAL2E base run is performed first, followed by an uncertainty run. The Withlacoochee River basin is located in Florida and is a simple reach system containing 11 reaches. Two point source loads are applied in

Example 2. Six water quality parameters are simulated: temperature, BOD, algae, DO, phosphorus, and nitrogen. In the uncertainty analysis, the First Order Error analysis is used and a default input perturbation of 5 percent is used for computing sensitivity coefficients. In addition, the variance of each input variable is given on Screen 23.

The steps that you must go through for this example run are explained below:

STEP 1. Select the QUAL2E Windows Interface option from the main QUAL2E menu. Choose FILE option, followed by the Open option. A list of QUAL2E input files will appear. Select a QUAL2E interface file, QAL2E002.INP. Since an uncertainty analysis is involved, you will see Uncertainty analysis is selected on Screen 1.

STEP 2. Familiarize yourself with this input file and the screens in the QUAL2E option by moving through the screens using the NEXT, BACK, or INDEX option.

You can easily change a number of rows in a column using a feature available in array screens of the QUAL2E Windows interface (screens where the same variable requires one or more rows of entries). If you click on the variable in these screens, you will be able to add, subtract, multiply, or divide for any single value or range of values for this variable. You can therefore change all zero values for a variable to a single default by adding the default value that you want to all the zero values in the array.

STEP 3. Submit the QUAL2E input file to the QUAL2E model for execution by clicking on the RUN button. An icon will appear at the bottom of the screen with the words QUAL2E MODEL EXECUTION. When the processing is complete, the output will be shown in the default output file viewer (i.e., default editor). View the output carefully.

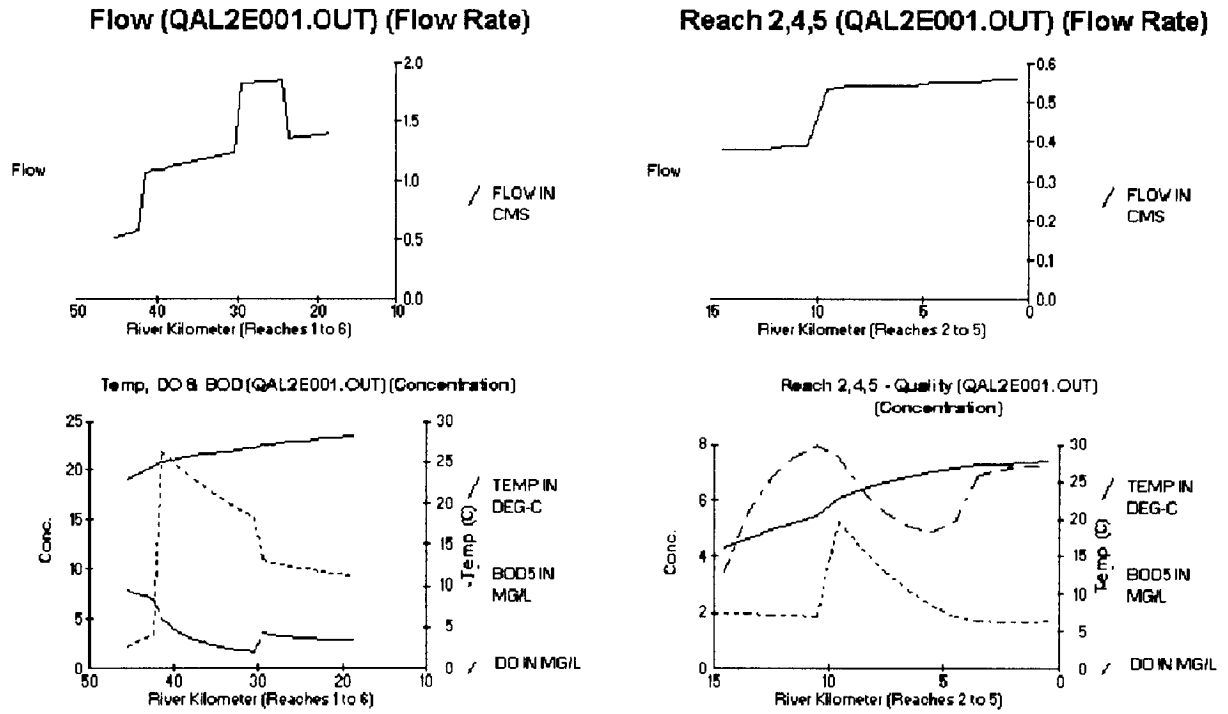


Figure 6.4 QUAL2E Graph from Example 1.

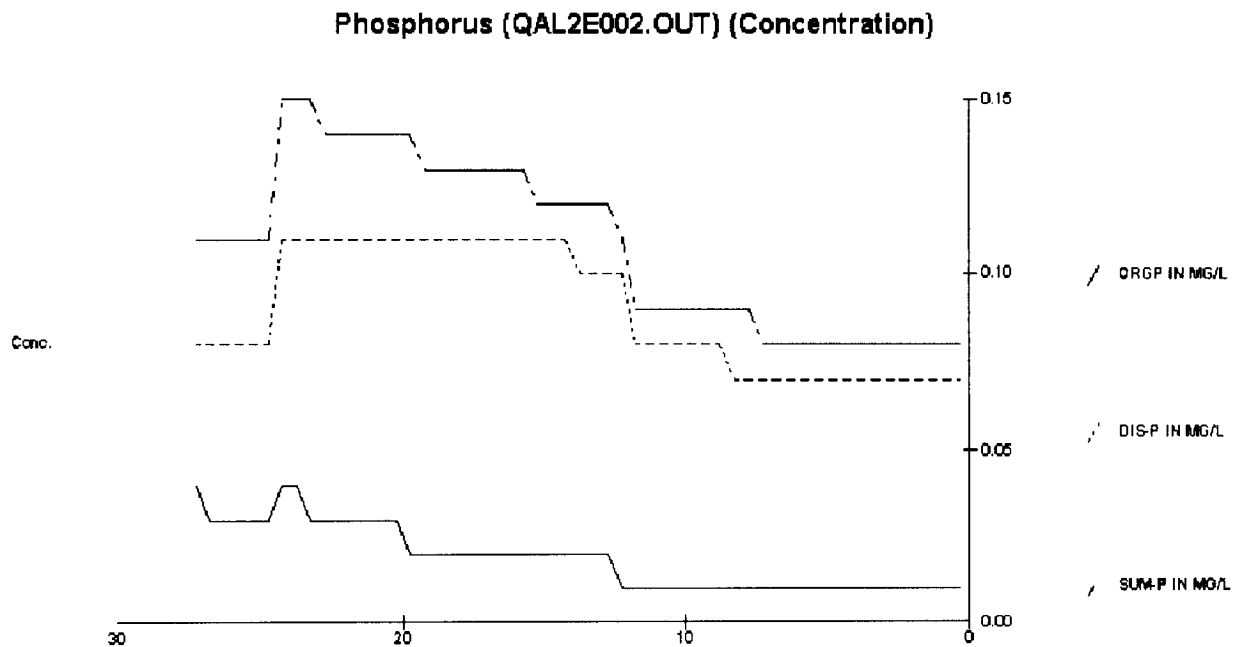


Figure 6.5 Phosphorus Concentration vs. Distance.

STEP 4. If you want to draw a QUAL2E graphic, click on the Graphics Button. A QUAL2E graphic for Example 2 is shown in Figure 6.5. To exit from QUAL2E, press ALT-F for File and then X for Exit.

6.3 Example 3—Dynamic/Diurnal Simulation

This example simulates a simple river system with a total of five reaches and nine water quality constituents for a QUAL2E run. This is a dynamic/diurnal simulation with a total simulation of 60 hours and a time step of 1 hour. Since it is a dynamic simulation, the climatological data are required at regular time intervals over the course of the simulation. There is an existing climatological input file available for input. The input file, DIURNAL.CLI, can be read through the Import function. In this example, the downstream boundary conditions are known and specified in the interface input file. The model solution will, therefore, be constrained to match the known concentrations.

The steps that you must follow for this example are explained in detail below:

STEP 1. Select the QUAL2E Windows Interface option from the main QUAL2E menu. Next, open the QUAL2E interface file, QUAL2E003.INP. The file will be loaded into the QUAL2E interface. Move through the screens and familiarize yourself with this option. Use the help information available to you through the HELP button to answer any questions you might have about any prompts.

STEP 2. Go to Screen 3 for the computational element set-up. The entire system con-

sists of a total of five reaches, three headwaters, two junctions, and one downstream element. There are no point source loads or withdrawals in the system, so the fields on Screen 3 that are not grayed represent the standard elements.

STEP 3. You may use the IMPORT function on the main menu bar at the top of the QUAL2E window. When you select the IMPORT option, you will see a list of five types of input files. Choose the CLI file type and select the DIURNL.CLI file from the list presented. The climatological data with 3-hour intervals will be entered on Screen 20. Click INDEX to move to Screen 20 and check the climatic data.

STEP 4. Next, click on the RUN button. The output file will be displayed when it is ready. If you want to plot the model results, click on the Graphics button.

APPENDIX A: QUAL2E WINDOWS INTERFACE DESIGN

This appendix contains the structures and variables for the QUAL2E Windows interface. Table A.1 provides input variables and the screen sequence in QUAL2E. There are a total of 24 screens in the QUAL2E interface. The input screen sequence (see Table 3.1) reflects the overall structure of the QUAL2E model. Screen numbers are assigned to cover all the general input requirements discussed previously. Table A.1 identifies the variables for each screen. This table contains the following for QUAL2E:

1. Input code used in QUAL2E
2. Data type
3. Description of the variable
4. QUAL2E variable
5. Screen number (SCR No.)
6. Control number (CON No.)
7. Control type (CON Type)
8. Item, type, range, default, and unit

Input code and data type are used in the uncertainty analysis part of QUAL2E. They are listed here for proper cross-referencing of the variables. Refer to Appendix B of *The Enhanced Stream Water Quality Models QUAL2E and QUAL2E-UNCAS: Documentation and User Manual* for more details. Screen number, control number, and control types are used internally by the QUAL2E Windows interface. Each variable has a unique control number on a particular screen in the interface. For example, if you refer to the first page of Table A.1, a variable NUMB is defined as Number of reaches, which is the last control on the first screen. In the QUAL2E###.RUN file it is the 10th card of Data Type 1; i.e., if you were to prepare an input file (QUAL2E###.RUN) without using the interface, you would enter Number of reaches in the 10th row of the group named Data Type 1. The NUMB's type is integer, its range is from 1 to 50, and the default should be 1. These data are used by the QUAL2E model.

A total of five input files may be needed for a QUAL2E run. Refer to Section 5.2 to see which files are required and which are optional.

Table A.1 Input Variables and Screen Sequence in QUAL2E

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
		QUAL2E Simulation									
		Description of this run	TITLE01,02	1	1	1		C160			
	1	Simulation Type	STEAD	1	2	5					
		Steady-state		1	3	6					
		Dynamic		1	4	6					
	1	Unit	INPU	1	5	5					
		U.S. units		1	6	6					
		Metric		1	7	6					
		Uncertainty analysis		1	8	4					
	1	Flow augmentation	FIOW	1	9	4					
	1	Trapezoidal channels	TRAP	1	10	4					
	1	Max. Iterations	MAXI	1	11	1			1-	30	
	1	Time step (hours)	TIME	1	12	1		F	0-	0.0	
	1	Starting day of simulation	STAN	1	13	1		I	1-366	180	
	1	Total simulation length (hours)	MAXI	1	14	1		F		0.0	
	1	Time increment for RPT2 (hours)		1	15	1		F	0-	0.0	
		Stream system		1		5					
	1	Number of reaches	NUMB	1	16	1		I	1-50	1.0	
		*** Array screen, 1(16) determines # of rows									
		Stream Reach System									
	2	REACH NO.		2	1	1		I	0-50		
	2	REACH NAME		2	2	1		C15			
	2	BEGIN RIVER \n (mile) or (km)		2	3	1		F	0-	0.0	mile,km
	2	END RIVER \n (mile) or (km)		2	4	1		F	0-	0.0	mile,km
		HEADWATER		2	5	4					
	1	DELTA-X \n(mile) or (km)		2	6	1		F		1.0	
		*** Array screen, 1(16) determines # of rows									
		*** shrink column width, 5(4-22) has the same combo-list									
		Computational Element									
	4	REACH NO.		3	1	?		I			
	4	TOTAL \nELE		3	2	?/ca I		I	2-20		
	4	1		3	3	3		C4			
		Headwater		3			1		1		
		Standard		3			2		2		
		Junction		3			3		4		
		Point source		3			4		6		
		Withdrawal		3			5		7		
ENDFILE		Dam		3			6		2		

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
	4 2			3	4	3		C4			
		Standard		3			1		2		
		U/S junction		3			2		3		
		Downstream		3			3		5		
		Point source		3			4		6		
		Withdrawal		3			5		7		
		Dam		3			6		2		
	4 3			3	5	3		C4			
	4 4			3	6	3		C4			
	4 5			3	7	3		C4			
	4 6			3	8	3		C4			
	4 ...			3 ...				C4			
	4 20			3 22	3			C4			
		Water Quality Simulation									
		Temperature	TITLE06	4	1	4					
		BOD	TITLE07	4	2	4					
		Algae	TITLE08	4	3	4					
		Phosphorus cycle	TITLE09,10	4	4	4					
		Nitrogen cycle	TITLE11,12	4	5	4					
		Dissolved Oxygen	TITLE13	4	6	4					
		Fecal coliform	TITLE14	4	7	4					
		Conservative constituent		4	8	4					
		Number of constituents		4	9	1		I	0-3		
		Constituent #1	TITLE03	4	10	1		C4			
		Unit		4	11	1		C4			
		Constituent #2	TITLE04	4	12	1		C4			
		Unit		4	13	1		C4			
		Constituent #3	TITLE05	4	14	1		C4			
		Unit		4	15	1		C4			
		Non-conservative	TITLE015	4	16	4					
		Constituent name		4	17	1		C4			
		Unit		4	18	1		C4			
	1	Specified d/s boundary constituent concentrations	FIXE	4	19	4					
		BOD5		4	20	4					
	1	5-day ultimate BOD conversion K coeff.		4	21	1		F		0.23	
		Geographical and Climatological Data									
	1	Latitude (deg)	LATI	5	1	1		F10.0	0-90	34	DEG
	1	Longitude (dgc)		5	2	1		F10.0	0-180	85	DEG
	1	Standard meridian (deg)	STAN	5	3	1		F10.0	0-180	75	DEG

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
	1	Basin Elevation (ft)	ELEV	5	4	1		F	- 4 0 0 - 12000	1000	ft
	1	Dust attenuation coeff		5	5	1		F	0 . 0 5 - 0.15	0.06	
	1	Evaporation coeff		5		5					
ECOE F-AE	1	AE		5	6	1		F	0.0006-0.0068	0.00103	(ft/hr)/(in-Hg)
				5				F	0.000005-	0.0000094	(m/hr)/mbar
				5					0.000062		
ECOE F-BE	1	BE		5	7	1		F	0.00016-	0.00016	(ft/hr)/(in-Hg - mph)
				5				F	0.000272		
				5				F	0.0000032-	0.0000032	(m/hr)/mbar - m/s
				5				F	0.0000055		
		Temp correction factors		5	8	5					
		Default		5	9	6					
		User specified		5	10	6					
		Climatological data		5	11	5					
		Reach variable temp		5	12	6					
		Global values		5	13	6					
		Climatological input file		5	14	3					
		Output print		5		5					
	1	Summary	WRIT	5	15	4					
	1	Climatological data printout	PRIN	5	16	4					
	1	DO and BOD plot	PLOT	5	17	4					
		# of DO/BOD plots		5	18	1			1-50		
		Observed Dissolved Oxygen input file		5	19	3		C12			
		*** list all the reach numbers									
		*** 7(18) determines # of rows & 1(16)+1 determines # of columns									
		Reach Numbers for DO/BOD to be Plotted									
		PLOT		6	1	7		I	0-50		
		#LOC		6	2	1		I			
		R1		6	3	4					
		R2		6	4	4					
		R3		6	5	4					
		...		6	...	4					

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
		R50		6	52	4					
		*** Array screen, load values from 5(18) if DO input file is available	file is available								
		*** or create Observed DO input file									
		Observed Dissolved Oxygen Data									
		PLOT		7	1	3		I			
		RIVER LOCATION \n (mile) or (km)		7	2	1		F			mile,km
		MIN DO \n (mg/l)		7	3	1		F	0.0-25.0	0.0	mg/l
		AVE DO \n (mg/l)		7	4	1		F	0.0-25.0	0.0	mg/l
		MAX DO \n (mg/l)		7	5	1		F	0.0-25.0	0.0	mg/l
		*** Required only algae, N, or P are simulated									
		Global Kinetics									
		Oxygen uptake by		8		5					
NH3OXYUP	1A	Ammonia oxidation (mg O/mg N)	O_UP	8	1	1		F	3.-3.5	3.43	m g O/mg N
NO2OXYUP	1A	Nitrite oxidation (mg O/mg N)		8	2	1		F	1.-1.2	1.14	m g O/mg N
	1A	Algae		8		5					
AGYOXYPR	1A	Oxygen production by growth (mg O/mg A)	O_PR	8	3	1		F	1.4-1.8	1.6	m g O/mg A
AGYOXYUP	1A	Oxygen uptake by respiration (mg O/mg A)			8	4	1	F	1.6-2.3	2.0mg	O/mg A
AGYNCON	1A	Nitrogen content (mg N/mg A)	N_CO	8	5	1		F	0.08 - 0.09	0.085	m g N/mg A
AGYPCON	1A	Phosphorus content (mg P/mg A)		8	6	1		F	0.012 - 0.015	0.014	m g P/mg A
AGYGRMX	1A	Max. specific growth rate (1/day)	ALG_	8	7	1		F	1.-3.	2.5	
AGYRESPR	1A	Respiration rate (1/day)		8	8	1		F	0.05-0.5	0.05	
NHALFSAT	1A	Nitrogen half saturation coeff	N_HA	8	9	1		F	0.02-0.4	0.2	
PHALFSAT	1A	Phosphorus half saturation coeff		8	10	1		F	0.02-0.1	0.04	
AGYEXTLN	1A	Linear coeff.	LIN_	8	11	1		F	0.-0.003	0.00075	(1/ft)/(u g - chal/l)
AGYEXTNL	1A	Nonlinear coeff.		8	12	1		F	0.-0.003	0.0	(1/m)/(u g - chal/l)
		Light		8		5					
	1A	Light Function	LIGH	8	13	3		I	1-3	1	

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
	1A	Half saturation		8			1				
	1A	Simth's function		8			2				
	1A	Steele's function		8			3				
	1A	Saturation coeff.		8	14	1		F	0-0.15	0.11	BTU/ft ² -min
				8					0-0.04	0.03	Langleys/min
	1A	Intensity		8	15	1		F	0-1500	1300	BTU/ft ² -min
				8					0-400.0	350.0	Langleys/min
	1A	Light ave. from sloar radiation		8	16	3		I	1-4	2	
	1A	Daily-temp	DAIL	8			1				
	1A	Daily-data		8			2				
	1A	24 hourly-temp		8			3				
	1A	24 hourly-data		8			4				
LAVGFACT	1A	Light averaging factor		8	17	1		F	0.85-1.0	0.92	
NUMBDLH	1A	Number of daylight hours	NUMB	8	18	1		F	4.-18.0	14.0	
TDYSOLAR	1A	Daily radiation (BTU/ft ²) or (Langleys)		8	19	1		F	0.-1500.	1300.0	BTU/ft ² , Langleys
	1A	Light nutrient interactions		8	20	3		I	1-3	2	
	1A	Multiplicative	ALGY	8			1				
	1A	Limiting nutrient		8			2				
	1A	Harmoni mean		8			3				
APREFNH3	1A	Algal preference factor for NH ₃		8	21	1		F	0.1-0.9	0.9	
A/TFACT	1A	Solar radiation factor	ALG/	8	22	1		F	0.4-0.5	0.44	
NHIBFACT	1A	Nitrification inhibition coeff.		8	23	1		F	0.-10.0	10.0	
		Temperature Correction Factors									
TC/BODDC	1B	BOD decay		9	1	1		F	1-1.1	1.047	
TC/BODST	1B	BOD settling		9	2	1		F	1-1.1	1.024	
TC/BEAER	1B	Reaeration		9	3	1		F	1-1.1	1.024	
TC/SOD	1B	SOD uptake		9	4	1		F	1-1.1	1.060	
		Nitrogen		9		5					
TC/NH2DC	1B	Organic N decay		9	5	1		F	1-1.1	1.047	

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
TC/NH 2ST	1B	Organic N settling		9	6	1		F	1-1.1	1.024	
TC/NH 2ST	1B	Ammonia decay		9	7	1		F	1-1.1	1.083	
TC/NH 3SC	1B	Ammonia source		9	8	1		F	1-1.1	1.074	
TC/NO 2DC	1B	Nitrite decay		9	9	1		F	1-1.1	1.047	
		Phosphorus		9		5					
TC/PR GDC	1B	Organic P decay		9	10	1		F	1-1.1	1.047	
TC/PR GST	1B	Organic P settling		9	11	1		F	1-1.1	1.024	
TC/PO 4SC	1B	Dissolved P source		9	12	1		F	1-1.1	1.074	
		Algae		9		5					
TC/AL GRO	1B	Growth		9	13	1		F	1-1.1	1.047	
TC/AL RES	1B	Respiration		9	14	1		F	1-1.1	1.047	
TC/AL SET	1B	Settling		9	15	1		F	1-1.1	1.024	
TC/CL ID	1B	Coliform decay		9	16	1		F	1-1.1	1.047	
		Non-conservative		9		5					
TC/AN CDC	1B	Decay		9	17	1		F	1-1.1	1.000	
TC/AN CST	1B	Settling		9	18	1		F	1-1.1	1.024	
TC/AN CSC	1B	Source		9	19	1		F	1-1.1	1.000	
		*** Array screen, 1(16) determines # of rows									
		*** Load all headwaters into a comb-list for 12(4-9)									
		Flow Augmentation									
		REACH NO.		10	1	?					
	3	# OF HEAD		10	2	1		I	0-100	0	
	3	MIN DO \n(mg/l)		10	3	1		F	0.-15.	5.0	mg/l
	3	SOURCE /#1		10	4	3			0-100	0	
	3	SOURCE /#2		10	5	3			0-100	0	
	3	SOURCE /#3		10	6	3			0-100	0	
	3	SOURCE /#4		10	7	3			0-100	0	
	3	SOURCE /#5		10	8	3			0-100	0	
	3	SOURCE /#6		10	9	3			0-100	0	
		*** Array screen, 1(16) determines # of rows									

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
		Hydraulic Data									
	5	REACH NO.		11	1	1		I	1-50		
DISPS N-K	5	DISPER \nCONST		11	2	1		F	6.-6000.	60.0	ft ² /s,m ² /day
COEF QV-A	5	Q COEFF \nVELOCITY		11	3	1		F	0.-	0.0	
EXPO QV-B	5	Q EXP \nVELOCITY		11	4	1		F	0.0-1.0	0.00	
COEF QH-C	5	Q COEFF \n DEPTH		11	5	1		F	0-	0.00	
EXPO QH-D	5	Q EXP \nDEPTH		11	6	1		F	0.0-1.0	0.00	
MANN INGS	5	MANNING		11	7	1		F	.001-.05	0.02	
TRAP-SS1	5	SIDE \nSLOPE 1		11	8	1		F	0 . 0 - 1000.		ft/ft,m/m
TRAP-SS2	5	SIDE \n SLOPE 2		11	9	1		F	0 . 0 - 1000.		ft/ft,m/m
TRAP-WTH	5	WIDTH		11	10	1		F	0-		ft,m
TRAP-SLP	5	SLOPE		11	11	1		F	0.0-1.0		ft/ft,m/m
ELEV ATIN	5A	ELEV		11	12	1		F	- 4 0 0 - 12000	1000.0	ft
									- 1 2 0 . - 3650.	305	m
DUST ATTN	5A	DUST /COEFF		11	13	1		F	.01-.15	.06	
CLOUD	5A	CLOUD		11	14	1		F	0.0-1.0	0.0	
DRYB ULB	5A	DRY /TEMP		11	15	1		F	1.-100.	70.	F
									2-55	20	C
WETB ULB	5A	WET /TEMP		11	16	1		F	1.-100.	60.	F
									2.-55.	15.0	C
ATMP RES	5A	BAROMETRIC /PRESSURE		11	17	1		F	27.-33.	30.	in-Hg
									9 0 0 . - 1100.	1017.	mbar
WIND VEL	5A	WIND /SPEED		11	18	1		F	0.-100.	0.0	ft/s
									0-36	0.0	m/s
		*** Array screen, 1(16) determines # of rows									
		BOD and DO Reaction Rate Constants									
		REACH NO.		12	1	?					

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
B O D DECA	6	BOD DECAY \n(1/day)		12	2	1		F	0.-10.	0.0	1/day
B O D SETT	6	BOD SETTLING \n(1/day)		12	3	1		F	0.-10.	0.0	1/day
S O D RATE	6	SOD RATE \n(g/ft2-day) or (f/m2-day)		12	4	1		F	0.-1.	0.0	g / f t 2 - day,
								F	0.-10.	0.0	g / m 2 - day
	6	TYPE \n REAERATION		12	5	3		I	1-8	3	
	6	Single coeff.		12			1				
	6	Churchill		12			2				
	6	O'Connor and Dobbins		12			3				
	6	Owens, Edwards, and Gibbs		12			4				
	6	Thackston and Krenkel		12			5				
	6	Langbien and Durum		12			6				
	6	Power function		12			7				
	6	Tsivoglou-Wallace		12			8				
	6	REAERATION \n COEFF.		12	6	1		F	0.-100.	0.0	
	6	COEFF		12	7	1		F	0-	0.0	1/ft,1/m
	6	EXPONENT		12	8	1		F	0-	0.0	
		*** Array screen, 1(16) determines # of rows									
		N, P, and Algae Coefficients				1					
	6A	REACH NO.		13	1	?					
N H 2 DECA	6A	O-N \n HYDROLYSIS		13	2	1		F	0.-10.	0.0	1/day
N H 2 SETT	6A	O-N \n SETTLING		13	3	1		F	0.-10.	0.0	1/day
N H 3 DECA	6A	NH3 \n OXIDATION		13	4	1		F	0.-10.	0.0	1/day
N H 3 SRCE	6A	NH3 \n BENTHOS		13	5	1		F	0-	0.0	mg/ft2-day
										0.0	mg/m2-day
N O 2 DECA	6A	NO2 \n OXIDATION		13	6	1		F	0.-10.	2.0	1/day
PORG DEC	6A	O-P \n DECAY		13	7	1		F	0.-10.	0.0	1/day
PORG SET	6A	O-P \n SETTLING		13	8	1		F	0-	0.0	1/day
D I S P SRC	6A	DIS-P \n BENTHOS		13	9	1		F	0-	0.0	mg/ft2-day
										0.0	mg/m2-day
CHLA/ART	6B	CHL-A \n ALGAE		13	10	1		F	1.-100.	10.0	u g chla/mg algae

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
A L G SETT	6B	ALGAE \n SETTLING		13	11	1		F	0-.3.	1.0	ft/day
				13					0-1.0	1.0	m/day
LTEXT NCO	6B	NON-ALGAL \n LIGHT EXT		13	12	1		F	0-3	0.0	1/ft
				13					0-24.0	0	1/m
C O L I DEC	6B	COLIFORM		13	13	1		F	0.-10.	0.0	1/day
				13							
A N C DECA	6B	NON-CONS \n DECAY		13	14	1		F	0-	0.0	1/day
A N C SETT	6B	NON-CONS \n SETTLING		13	15	1		F	0-	0.0	1/day
A N C SRCE	6B	NON-CONS \n BENTHOS		13	16	1		F	0-	0.0	mg/ft2-day
									0-	0.0	mg/m2-day
		*** Array screen, 1(16) determines # of rows									
		*** 'name' is obtained from Screen No. 6 if any									
		Initial Conditions of the Stream									
	7	REACH NO.		14	1	?			1-50	1	
	7	TEMP		14	2	1		F	35.-135.	70.0	F
									2-55.0	21.0	C
	7	DO		14	3	1		F	0.-15.	0.0	mg/l
	7	BOD		14	4	1		F	0.-1000.	0.0	mg/l
	7	CONS #1\nname		14	5	?/1		F	0-		f r o m 6(11)
	7	CONS #2 \nname		14	6	?/1		F	0-		f r o m 6(13)
	7	CONS #3\nname		14	7	?/1		F	0-		f r o m 6(15)
	7	NON-CONS \nname		14	8	?/1		F	0-		f r o m 6(18)
	7	COLIFORM		14	9	1		F	0-		No./100ml
	7A	CHL-A		14	10	1		F	0-		ug/l
	7A	ORG-N		14	11	1		F	0-		mg/l
	7A	NH3-N		14	12	1		F	0-		mg/l
	7A	NO2-N		14	13	1		F	0-		mg/l
	7A	NO3-N		14	14	1		F	0-		mg/l
	7A	ORG-P		14	15	1		F	0-		mg/l
	7A	DIS-P		14	16	1		F	0-		mg/l
		*** Array screen, 1(16) determines # of rows									
		*** 'name' is obtained from Screen No. 6 if any									
		Incremental Inflow									

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
	8	REACH NO.		15	1	?					
INCRFLOW	8	FLOW		15	2	1		F			ft ³ /s, m ³ /s
INCRT EMP	8	TEMP		15	3	1		F	35.-135.	70.0	F
									2.-55.0	21.0	C
INCRDO	8	DO		15	4	1		F	0.-15.	0.0	mg/l
INCRBOD	8	BOD		15	5	1		F	0.-1000.	0.0	mg/l
INCR CM1	8	CONS #1\n name		15	6	?/1		F	0-		f r o m 6(11)
INCR CM2	8	CONS #2\n name		15	7	?/1		F	0-		f r o m 6(13)
INCR CM3	8	CONS #3\n name		15	8	?/1		F	0-		f r o m 6(15)
INCRA NC	8A	NON-CONS\n name		15	9	?/1		F	0-		f r o m 6(18)
INCR COLI	8A	COLIFORM		15	10	1		F	0-		No./10 0ml
INCR CHLA	8A	CHL-A		15	11	1		F	0-		ug/l
INCR NH2N	8A	ORG-N		15	12	1		F	0-		mg/l
INCR NH3N	8A	NH3-N		15	13	1		F	0-		mg/l
INCR NO2N	8A	NO2-N		15	14	1		F	0-		mg/l
INCR NO3N	8A	NO3-N		15	15	1		F	0-		mg/l
INCRP ORG	8A	ORG-P		15	16	1		F	0-		mg/l
INCR DISP	8A	DIS-P		15	17	1		F	0-		mg/l
		*** Array screen									
		*** 'name' is obtained from Screen No. 6 if any									
		Headwater Source Data									
	10	HEADWATER\n NAME		16	1	?					
HWTR FLOW	10	FLOW		16	2	1		F			ft ³ /s, m ³ /s
HWTR TEMP	10	TEMP		16	3	1		F	35.-135.	70.0	F
									2.-55.0	21.0	C
HWTR DO	10	DO\n (mg/l)		16	4	1		F	0.-15.	0.0	mg/l

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
HWTR BOD	10	BOD \n(mg/l)		16	5	1		F	0.-1000.	0.0	mg/l
HWTR CM1	10	CONS #1\nname		16	6	?/1		F			f r o m 6(11)
HWTR CM2	10	CONS #2\nname		16	7	?/1		F			f r o m 6(13)
HWTR CM3	10	CONS #3\nname		16	8	?/1		F			f r o m 6(15)
HWTR ANC	10A	NON-CONS\nname		16	9	?/1		F			f r o m 6(18)
HWTR COLI	10A	COLIFORM \n(No./100ml)		16	10	1		F			No./100ml
HWTR CHLA	10A	CHAL-A		16	11	1		F			ug/l
HWTR NH2N	10A	ORG-N		16	12	1		F			mg/l
HWTR NH3N	10A	NH3-N		16	13	1		F			mg/l
HWTR NO2N	10A	NO2-N		16	14	1		F			mg/l
HWTR NO3N	10A	NO3-N		16	15	1		F			mg/l
HWTR PORG	10A	ORG-P		16	16	1		F			mg/l
HWTR DISP	10A	DIS-P		16	17	1		F			mg/l
		*** Array screen									
		** total # of point loads & withdrawals determines # of rows									
		*** 'name' is obtained from Screen No. 6 if any									
		Point Loads and Withdrawals									
	11	REACH NO.		17	1	1		F			
		ELE NO.		17	2	1					
		TYPE		17	3	1		C			
		NAME		17	4	1					
PTLD TFCT	11	TREAT \n(%)		17	5	1		F	0.0-1.0	0.0	
PTLD FLOW	11	FLOW		17	6	1		F	-999.-999	0.0	ft3/s,m3/s
PTLD TEMP	11	TEMP		17	7	1		F	35.-135.	70.0	F
									2.-55.0	21.0	C
PTLD DO	11	DO		17	8	1		F	0.-15.	0.0	mg/l
PTLD BOD	11	BOD		17	9	1		F	0.-1000.	0.0	mg/l

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
PTLD CM1	11	CONS #1 \nname		17	10	?/1		F	0-		f r o m 6(11)
PTLD CM2	11	CONS #2 \nname		17	11	?/1		F	0-		f r o m 6(13)
PTLD CM3	11	CONS #3 \nname		17	12	?/1		F	0-		f r o m 6(15)
PLTD ANC	11A	NON-CONS \nname		17	13	?/1		F	0-		f r o m 6(18)
PTLD COLI	11A	COLIFORM		17	14	1		F	0-		No./100ml
PTLD CHLA	11A	CHL A		17	15	1		F	0-		ug/l
PTLD NH2N	11A	ORG-N		17	16	1		F	0-		mg/l
PTLD NH3N	11A	NH3-N		17	16	1		F	0-		mg/l
PTLD NO2N	11A	NO2-N		17	17	1		F	0-		mg/l
PTLD NO3N	11A	NO3-N		17	18	1		F	0-		mg/l
PTLD PORG	11A	ORG-P		17	19	1		F	0-		mg/l
PTLD DISP	11A	DIS-P		17	20	1		F	0-		mg/l
		*** Array screen									
		Dam Reaeration									
	12	REACH NO.		18	1	?					
	12	ELE #		18	2	?		I	1-20		
DAMS ACOF	12	ADAM \nCOEFF		18	3	1		F	.5-2.0	1.0	
DAMS BCOF	12	BDAM \nCOEFF		18	4	1		F	.01-1.5	1.0	
DAMS FRAC	12	% FLOW \nOVER DAM		18	5	1		F	0.0-1.0	0.0	
	12	HEIGHT \nDAM		18	6	1		F	0-	0.0	ft,m
		*** 'name' is obtained from Screen No. 6 if any									
		Downstream Boundary									
	13	Temperature		19	1	1		F	35.-135.	70.0	F
									2.-55.0	21.0	C
	13	Dissolved oxygen (mg/l)		19	2	1		F	0.-15.	0.0	mg/l
	13	BOD concentration (mg/l)		19	3	1		F	0.-1000.	0.0	mg/l
	13	Conservative #1 (name)		19	4	?/1		F	0-		f r o m 6(11)

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
	13	Conservative #2 (name)		19	5	?/1		F	0-		f r o m 6(13)
	13	Conservative #3 (name)		19	6	?/1		F	0-		f r o m 6(15)
				19		5		F	0-		
	13	Non-conservative (name)		19	7	?/1		F	0-		f r o m 6(18)
	13	Coliform (No./100 ml)		19	8	1		F	0-		No./100 ml
	13A	Chlorophyll a (ug/l)		19	9	1		F	0-		ug/l
	13A	Organic N as N (mg/l)		19	10	1		F	0-		mg/l
	13A	Ammonia as N (mg/l)		19	11	1		F	0-		mg/l
	13A	Nitrite as N (mg/l)		19	12	1		F	0-		mg/l
	13A	Nitrate as N (mg/l)		19	13	1		F	0-		mg/l
	13A	Organic Phosphorus as P (mg/l)		19	14	1		F	0-		mg/l
	13A	Dissolved Phosphorus (mg/l)		19	15	1		F	0-		mg/l
		*** Array screen, load values from 7(14) if Climatological input file is available									
		*** or create Climatology input file									
		Global Values of Climatology Data									
		MON \n(mm)		20	1	1		I	1-12	1	
		DAY \n(dd)		20	2	1		I	1-31	1	
		YEAR \n(yy)		20	3	1		I	1-99	86	
		HOUR \n(hh)		20	4	1		F	0-23	0	
STAD ATN		SOLAR \n RADIATION		20	5	1		F	0.-550.	0.0	BTU/ft ² -hr
				20					0-150.0	0.0	Langle y/hr
		CLOUD		20	6	1		F	0.-1.	0.0	
		DRY TEMP		20	7	1		F	1.-100.	60.	F
									1.0-38.0	15.0	C
		WET TEMP		20	8	1		F	1.-100.	60.	F
									1.0-38.0	15.0	C
		BAROMETRIC \n PRESSURE		20	9	1		F	27.-33.	30.	in Hg
									9 0 0 . - 1100.	1017.0	mbar
		WIND \n SPEED		20	10	1		F	0-100.	0.0	ft/s
									0-36.	0.0	m/s
		Uncertainty Analysis									
		Description of uncertainty analysis		21	1			C80			

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
		Uncertainty		21	2	5					
		Sensitivity analysis		21	3	6					
		First order error analysis		21	4	6					
		Monte carlo simulation		21	5	6					
		Magnitude of input perturbation (%)		21	6	1					
		Number of simulations		21	7	1					
		Input condition		21	8	5					
		Single/Multiple perturbation		21	9	6					
		2-level factorial design		21	10	6					
		All inputs		21	11	6					
		Generic inputs		21	12	6					
		# of input variables		21	13	1					
	1,1A, 1B	Global		21	14	4					
	5,5A	Hydraulic/Climatology		21	15	4					
	6,6A, 6B	Reaction coefficient		21	16	4					
	8,8A	Incremental flow		21	17	4					
	10,10 A	Headwater		21	18	4					
	11,11 A	Point loads		21	19	4					
	12	Dams		21	20	4					
		Input variance data file		21	21	3					
		Intermediate output		21	22	5					
		None		21	23	6					
		Complete		21	24	6					
		Limited		21	25	6					
		Output variables		21		5					
		Hydraulic		21	26	4					
		Quality		21	27	4					
		Internal		21	28	4					
		*** VARIABLE, 24(3), were obtained from appropriate Input code									
		Input Variables for Sensitivity Analysis									
		TYPE		22	1	3					
		Single		22			1				
		Multiple		22			2				
		Fractorial		22			3				
		# OF INPUT		22	2	1		I			
		VARIABLE		22	3	3		C			
		PERTURBATION (%)		22	4	1		F			

Table A.1 (continued)

Input code	Data Type	Description	QUAL2E VARIABLE	SCR	CS	CT	Item	Type	Range	Default	Units
		*** Create/Edit Input Variance Data File									
		*** see Table 2 for 25(1-2)									
		Input Variables for First Order and Monte Carlo Analysis			23						
		GENERIC \n GROUP		23	1	load		C20			
		VARIABLE \n NAME		23	2	load		C30			
		COEFF \n VARIATION		23	3	1		F			
		PROBABILITY \nDF		23	4	3		C15			
		Normal		23			1				
		Log-normal					2				
		Select Element Number to be Printed									
		REACH NO.		24	1						
		E1		24	2	4					
		E2		24	3	4					
		...		24	...						
		E20		24	21	4					

REFERENCE

Brown, L. C., and T. O. Barnwell, Jr. 1987. *The Enhanced Stream Water Quality Models QUAL2E and QUAL2E-UNCAS: Documentation and User Manual*. EPA-600/3-87/007. U.S. Environmental Protection Agency, Athens, GA. May.

Table A.1 (continued)